

 
 








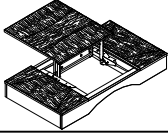


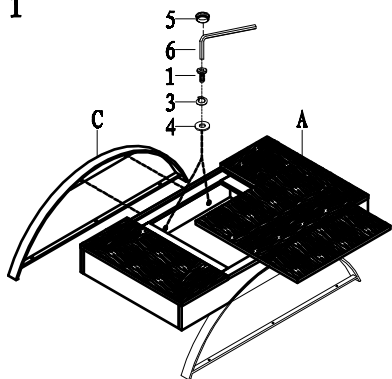
# Assembly Instruction

ITEM: 3533RF-30


LIFT TOP CKTL TBL W  
4PC CASTERS

PART LIST				HARDWARE LIST				
A	LIFT TOP PANEL		1PC	1	BOLT		Ø1/4"*1"	4PCS
				2	BOLT		Ø1/4"*5/8"	6PCS
B	BOTTOM PANEL		1PC	3	SPRING WASHER		Ø1/4"	10PCS
				4	FLAT WASHER		Ø1/4"*16mm	10PCS
C	LEG FRAME LSF/RSF		2PCS	5	PLASTIC CAP			4PCS
				6	ALLEN KEY		4mm	1PC
				7	CASTER		1-1/2"	4PCS
				8	SCREW		#3*16mm	16PCS


STEP 1




STEP 2

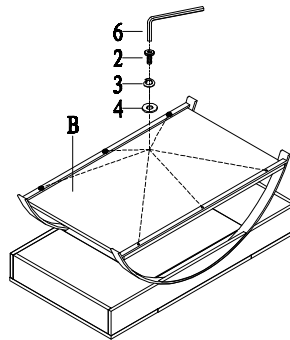

STEP 3

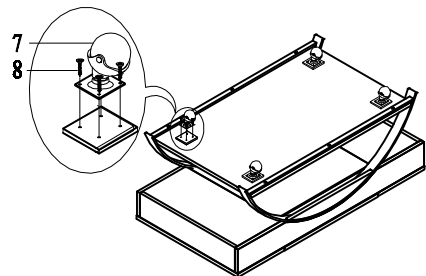

STEP 4

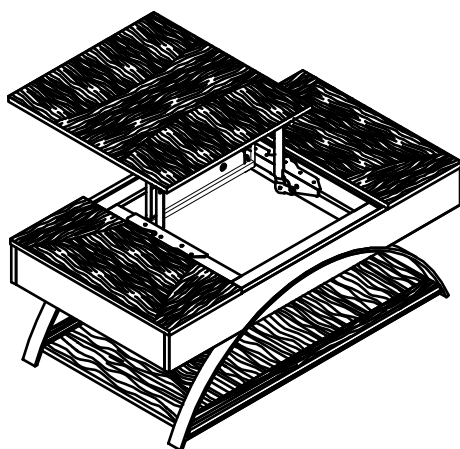

### CAUTION!

Do not allow children to play on the mechanized furniture or operate the mechanism. Top surfaces fold down on closing, so that a child could possibly be injured. Always leave furniture in the closed position when unattended. To prevent the table from tipping over, do not place more than 30 pounds on the top when in the open position.

KEEP HANDS CLEAR OF MECHANISM.



For items use on wooden floor, hard surfaces or carfaces or carpets, it is recommended to install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration