


ASSEMBLY INSTRUCTION

ITEM NO: SH1755S-N UPHL DINING CHAIR

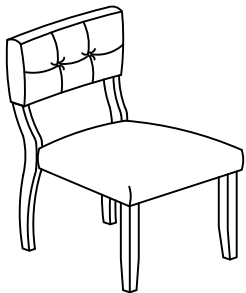

Thank you for purchasing this product. Please take time to read and follow instructions below. Check that you have all parts and hardware before assembly. Parts apparently missing are often found in packing materials. If you do not have all parts listed, call us and they be sent to you immediately.

 
 
 


It is recommended to install protective pads under all legs and supports to avoid damage or scratches when placing furniture on a wood floor or other hard surface, and to limit indentation and prevent discoloration if placing on carpet.



Hardware may loosen over time. Periodically check to make sure all connections are tight. Re-tighten if necessary.


PARTS LIST

1  BACKREST x 2	2  CUSHION SEAT x 2	3  FRONT LEG x 4
---	---	--

HARDWARE



A  JCBC BOLT SCREW M6 x 35MM x 4	B  JCBC BOLT SCREW M6 x 60MM x 8	C  JCBC BOLT SCREW M6 x 80MM x 8
D  SPRING WASHER M6 x 12MM x 20	E  FLAT WASHER M6 x 19MM x 20	F  ALLEN KEY M4 x 100MM x 1

STEP 1

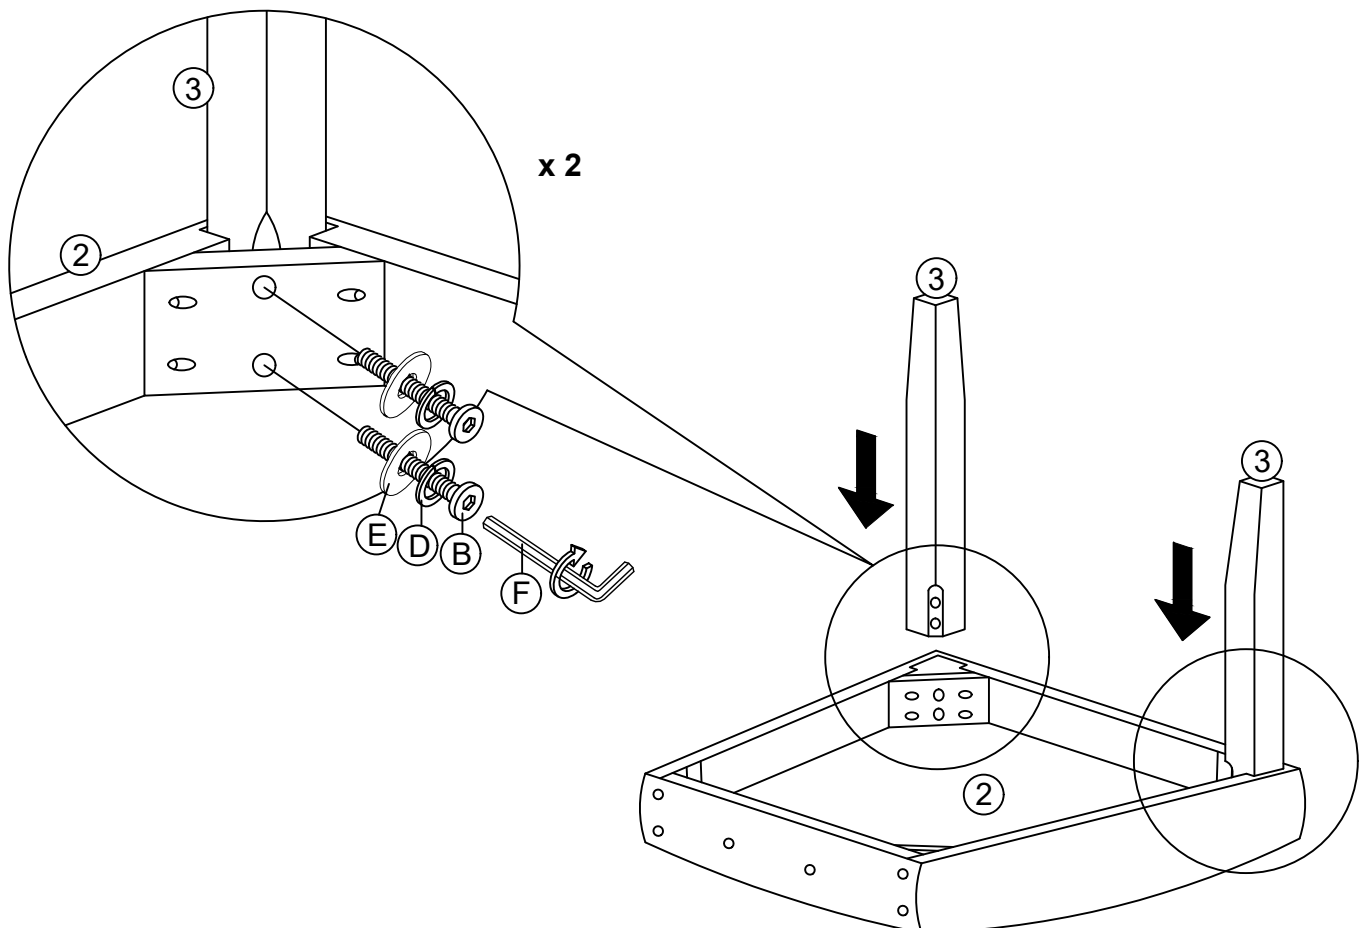

****DO NOT TIGHTEN BOLTS UNTIL COMPLETELY ASSEMBLED**

STEP 2

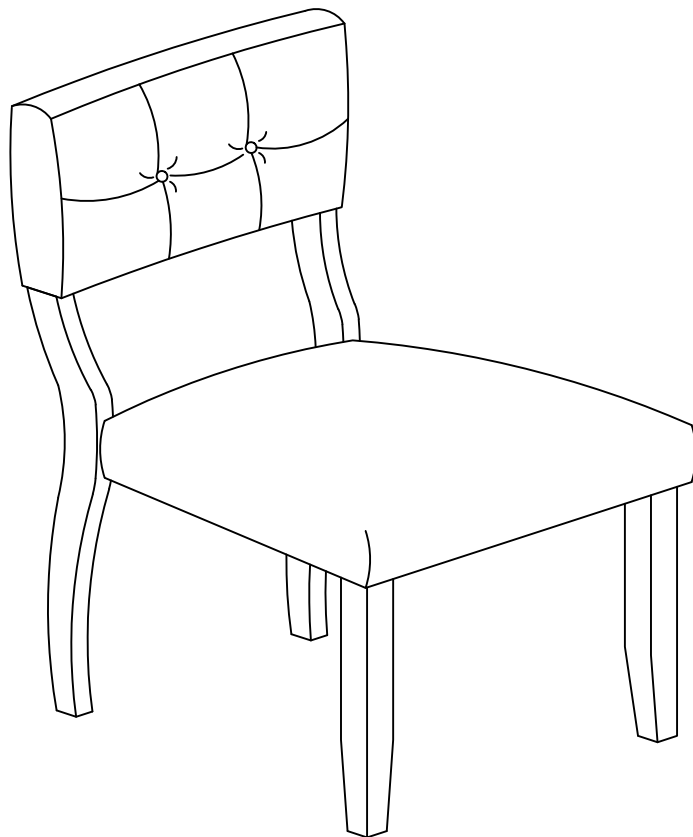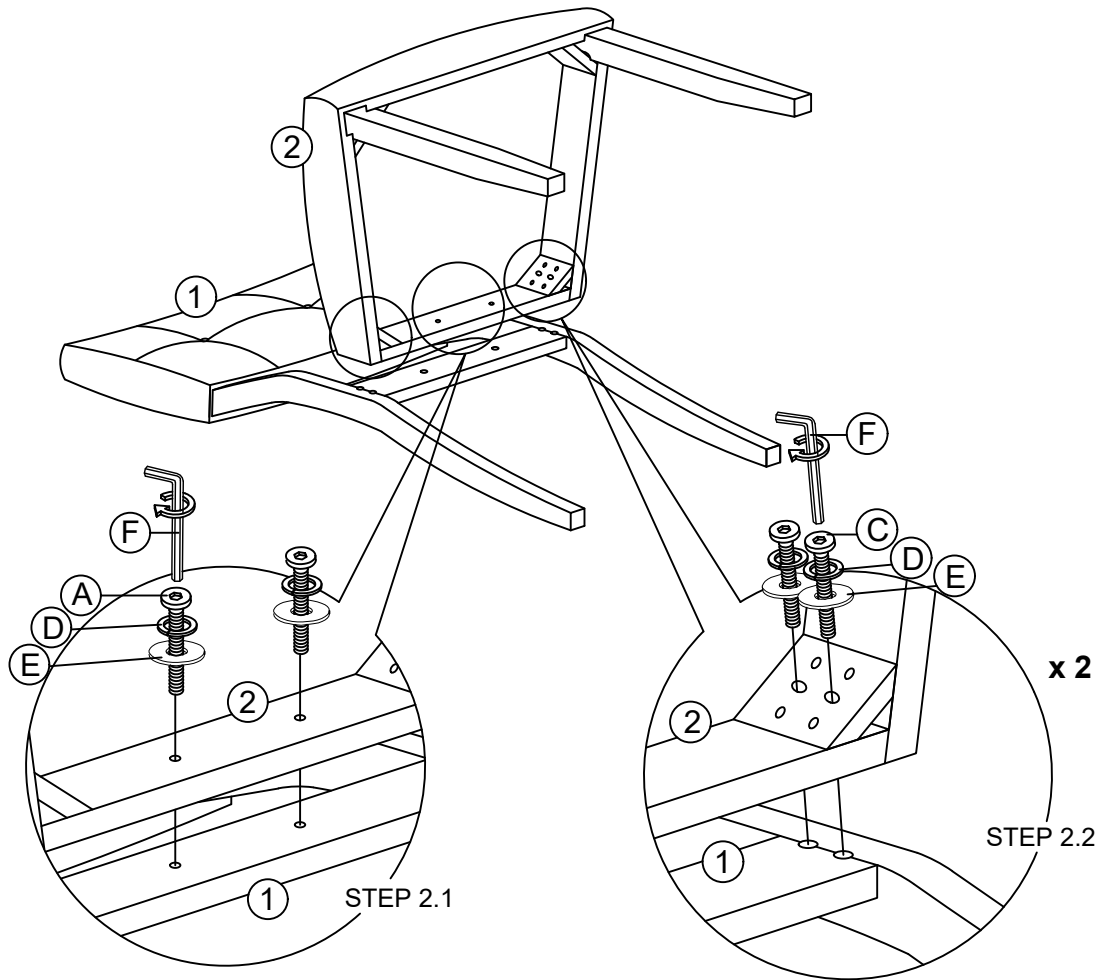

ASSEMBLY
COMPLETED

**DO NOT TIGHTEN BOLTS UNTIL COMPLETELY ASSEMBLED