 





ASSEMBLY INSTRUCTIONS


HOME ELEGANCE ITEM#5566-29BK3A/BR3A/GY3A/RD3A/WT3A

DESCRIPTION : SWIVEL PUB HEIGHT CHAIR


NO	PARTS LIST		QTY	NO	HARDWARE LIST		QTY
A		SEAT CUSHION	1	F		ALLEN BOTL 1/4*15MM	4
B		BACK WITH SWIVEL PLATE	1	G		SCREW 4*30MM	4
C		UPPER LEG	1	H		ALLEN BOTL 1/4*30MM	4
D		LOWER LEG	1	I		FLAT WASHER	8
E		BOTTOM RING	1	J		SPRING WASHER	8
				K		ALLEN KEY	1

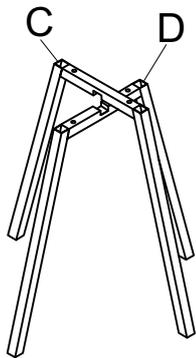


STEP 1

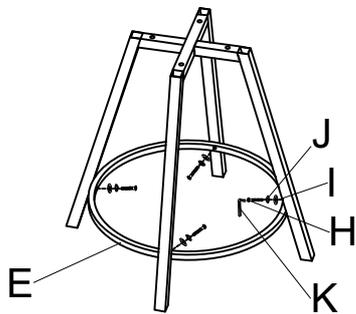


STEP 2

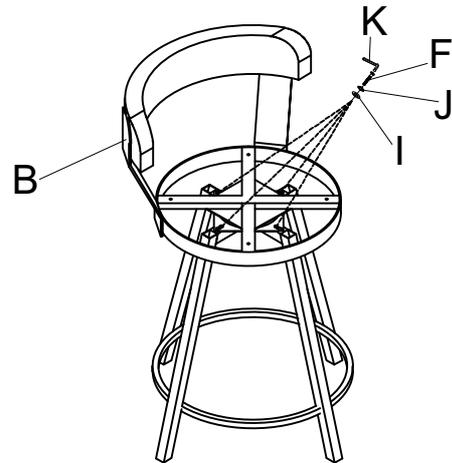

STEP 3

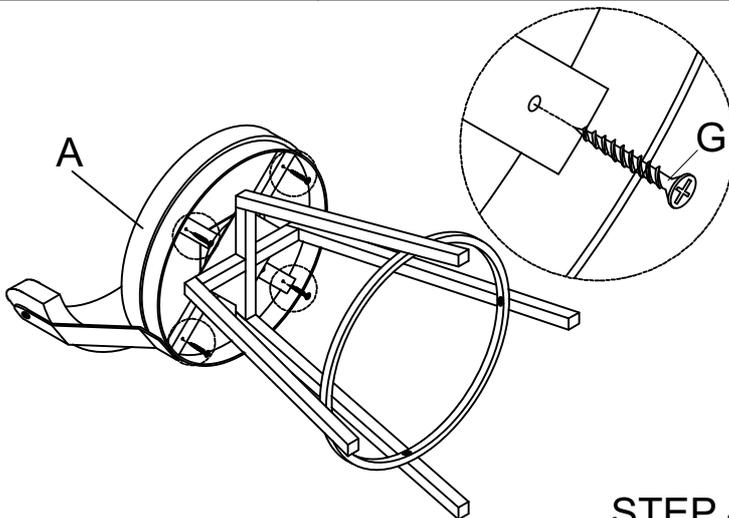

STEP 4

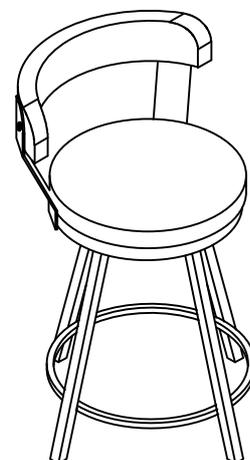

COMPLETED



For items use on wooden floor, hard surfaces or carpets, it is recommended to install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration

Do not tighten bolts until completely assembled