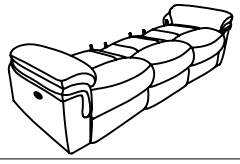


Assembly Instruction

ITEM NO: SH8893GRY-3PW/SH8893BRN-3PW

DOUBLE RECLINING SOFA

NOTE: Do not use power tools for assembly. Power tools increase the risk of over tightening which lead to splitting or cracking the wood.


PARTS LIST

NO.	DRAWING	QTY	DESCRIPTION
A		1	LSF BACK REST
B		1	MIDDLE BACK REST
C		1	RSF BACK REST
D		1	SEAT
E		1	LEFT EAR
F		1	RIGHT EAR
G		1	PLUG-IN POWER SUPPLY
H		1	THE PLUG FOR USB


Please follow the below drawings to assemble the item.

Note: Left ear and right ear are stored at the bottom of arm, please take out for assembly


Step 1.

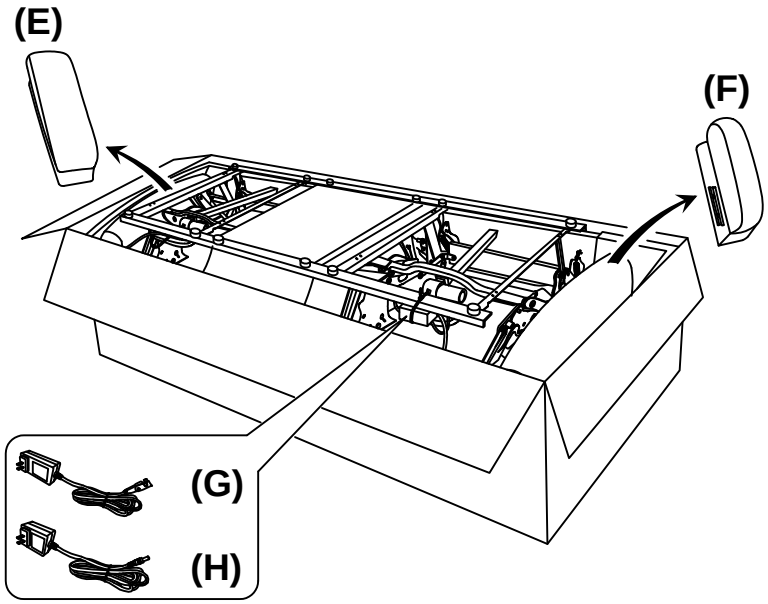


Step 2.

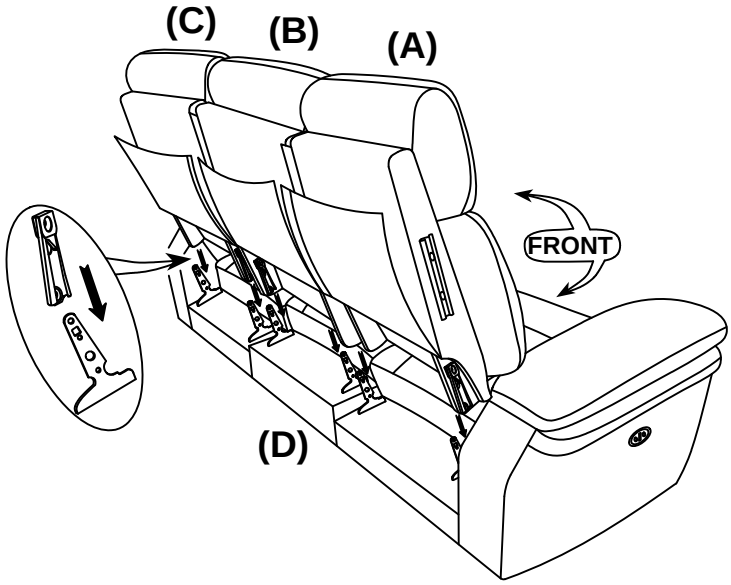


Step 3.

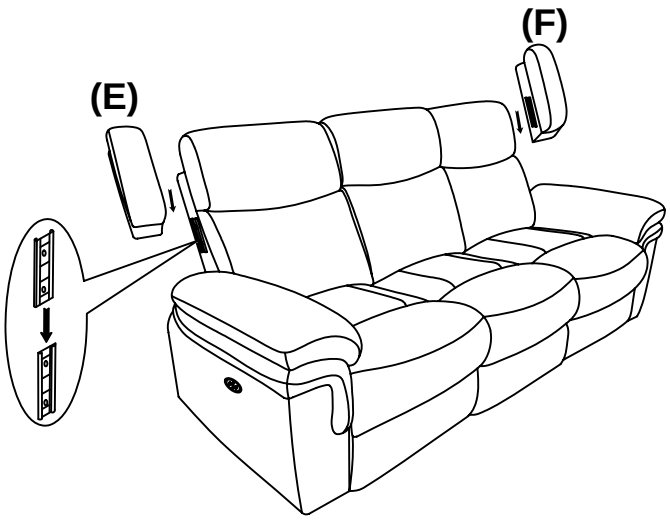

Step 4.

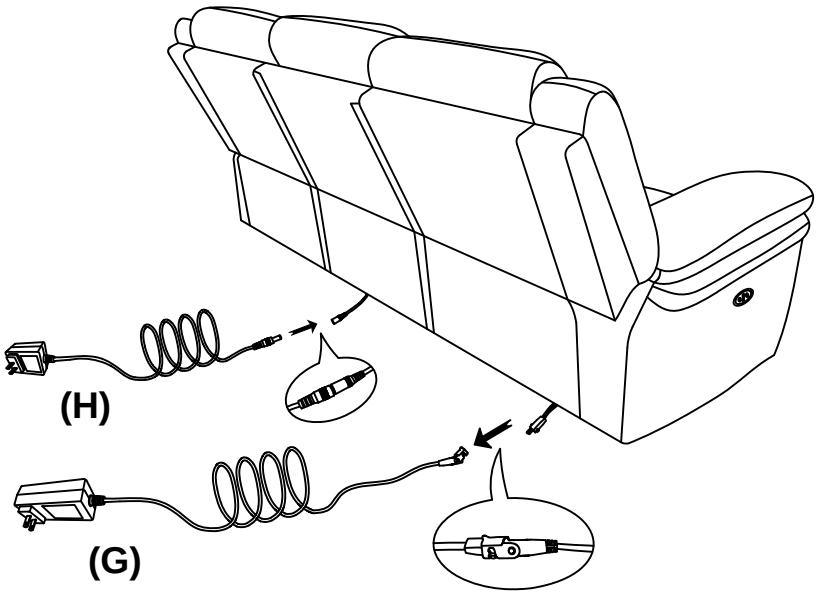

Completed.

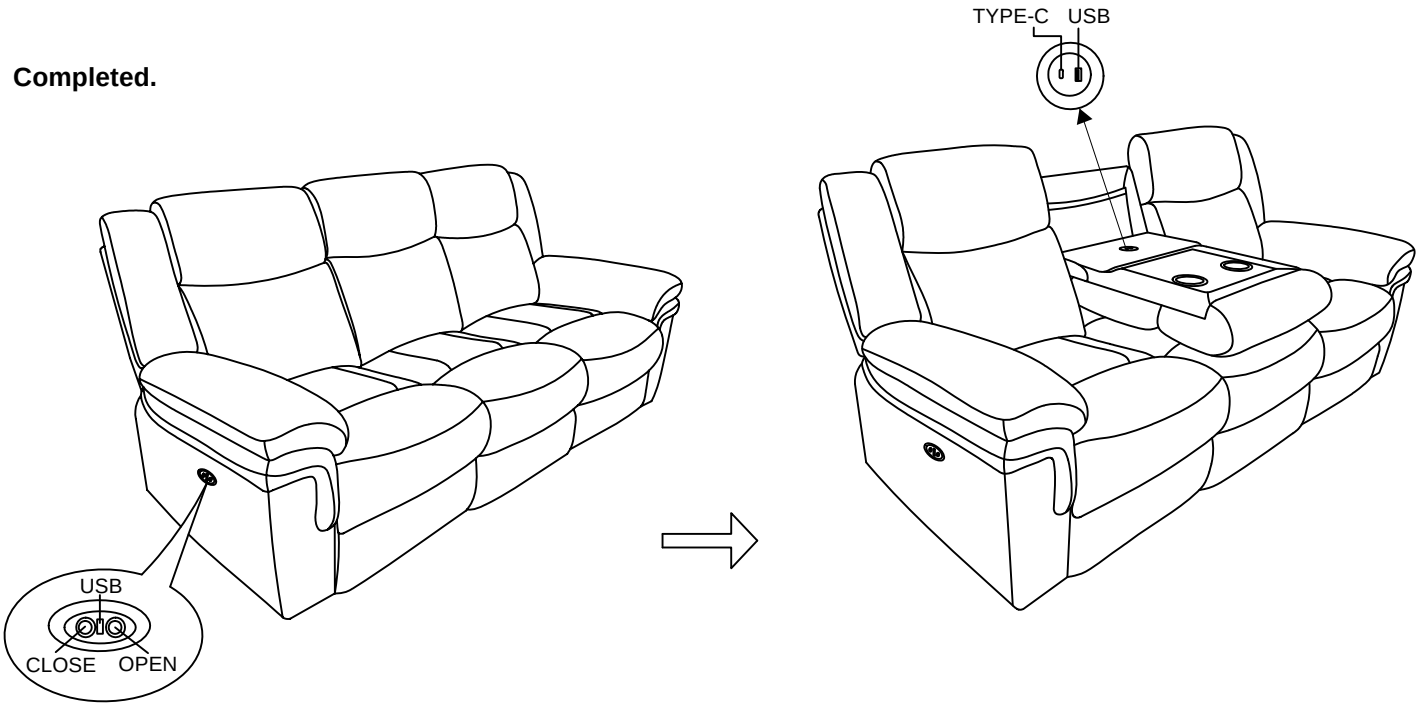

CARE INSTRUCTION FOR POLYESTER FURNITURE:

In order to maintain the original appearance of your polyester furniture, please follow below simple care procedure:

- **Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Exposure to sunlight or heating and air conditioning outlets will fade/damage polyester.**
- **Wipe gently with a damp soft cloth to remove dust, dirt and any grime build up.**

It is recommended to install protective pads under all legs and supports to avoid damage or scratches when placing furniture on a wood floor or other hard surface, and to limit indentation and prevent discoloration if placing on carpet.

PLEASE KEEP ASSEMBLY INSTRUCTION FOR FUTURE REFERENCE