


ASSEMBLY INSTRUCTION

ITEM NO : SH2600-5 DRESSER
SH2600-6 MIRROR

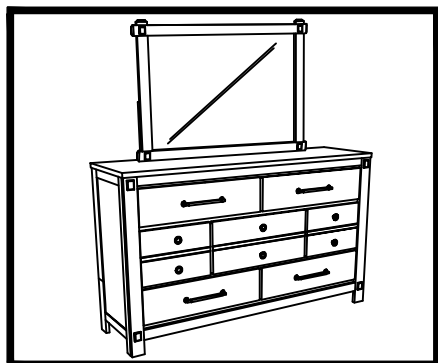

Thank you for purchasing this product. Please take time to read and follow the instructions below. Check that you have all parts and hardware before assembly. Parts apparently missing are often found in the packing materials. If you do not have all the parts listed, have your dealer contact us and they will be sent to you immediately.



It is recommended to install protective pads under all legs and supports to avoid damage or scratches when placing furniture on a wood floor or other hard surface, and to limit indentation and prevent discoloration if placing on carpet.



Hardware may loosen over time. Periodically check to make sure all connections are tight. Re-tighten if necessary

PARTS LIST

NO	DESCRIPTION	SKETCH	QTY
A	MIRROR		1 PC
B	DRESSER		1 PC

HARDWARE LIST

NO	DESCRIPTION	SKETCH	SIZE	QTY
1	CSK SCREW		M4 x 32MM	10 PCS


*ABOVE HARDWARE ARE PACKED IN SH2600-6 FOR ASSEMBLY

STEP 1 :

Cut the rope and rotate the Back Mirror Support upward before tightening the screw.

Remarks :

Mirror support rail is pre-attached on back side panel for all dresser.

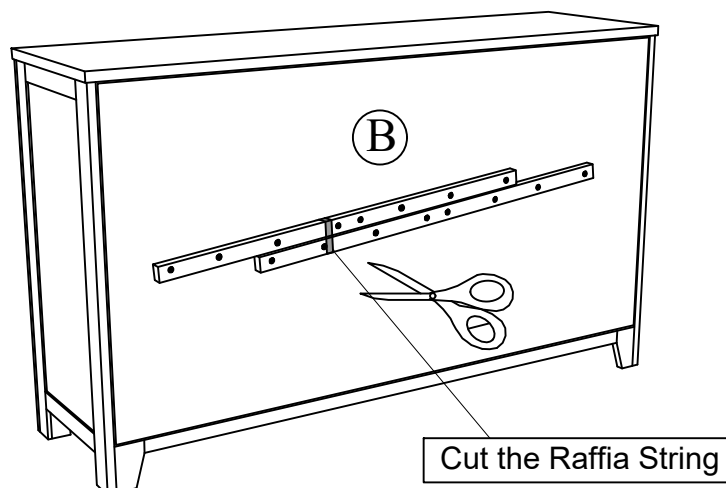


MADE IN MALAYSIA

NOTE: Must tighten screws periodically with use screws will become loose. Check tightness of all screws every 6-8 weeks.


DO NOT TIGHTEN BOLTS UNTIL COMPLETELY ASSEMBLED.

PAGE 1 OF 2


STEP 2 :

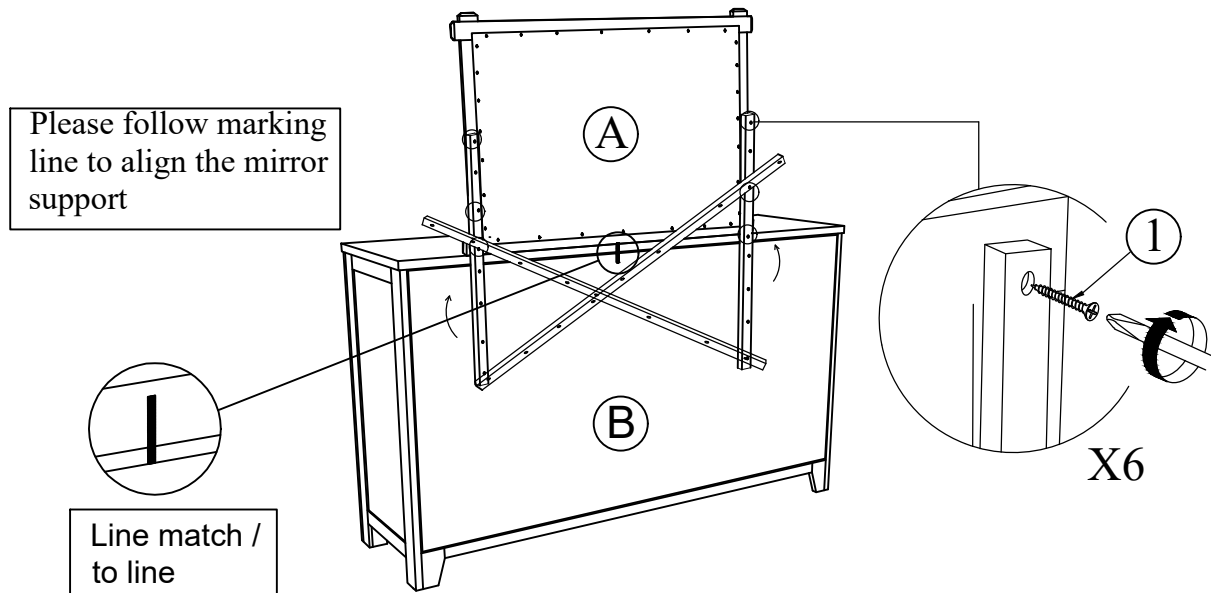

STEP 3 :

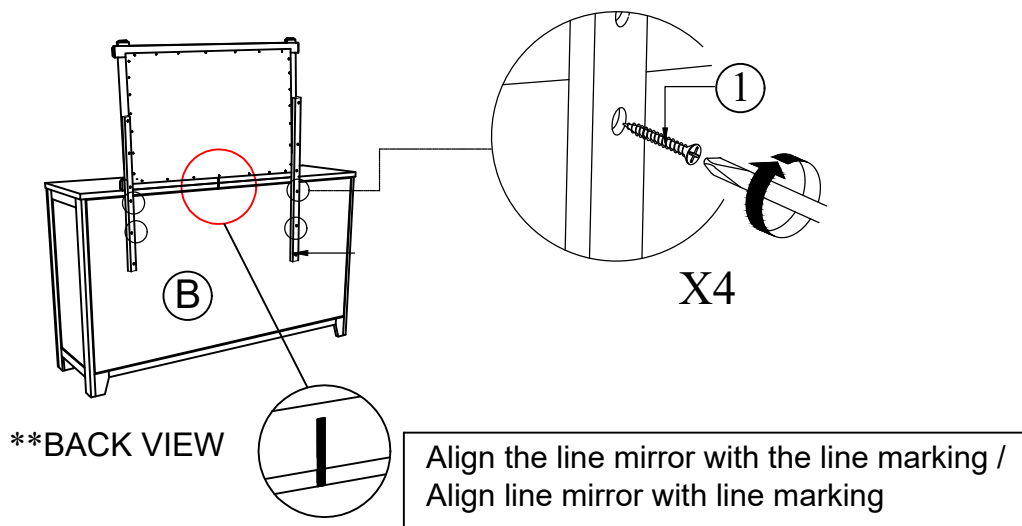

STEP 4 :

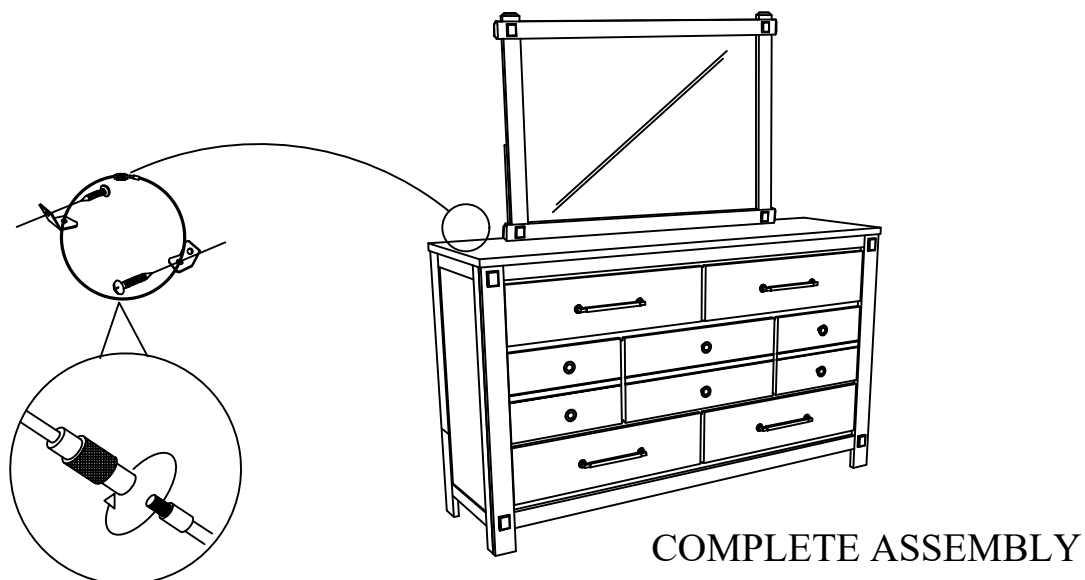

MADE IN MALAYSIA

NOTE: Must tighten screws periodically with use screws will become loose. Check tightness of all screws every 6-8 weeks.

DO NOT TIGHTEN BOLTS UNTIL COMPLETELY ASSEMBLED.

PAGE 2 OF 2