


ASSEMBLY INSTRUCTION

ITEM NO :SH2600K-1 KING HEADBOARD/FOOTBOARD/SLATS & SUPPORT LEGS
SH2600-3 QUEEN / EK SIDE RAILS /SIDE RAILS LEG

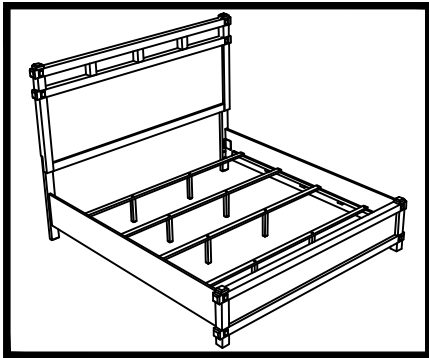

Thank you for purchasing this product. Please take time to read and follow the instructions below. Check that you have all parts and hardware before assembly. Parts apparently missing are often found in the packing materials. If you do not have all the parts listed, have your dealer contact us and they will be sent to you immediately.



It is recommended to install protective pads under all legs and supports to avoid damage or scratches when placing furniture on a wood floor or other hard surface, and to limit indentation and prevent discoloration if placing on carpet.



Hardware may loosen over time. Periodically check to make sure all connections are tight. Re-tighten if necessary



Foundation/box spring required, sold separately.

SH2600K-1 PARTS LIST			
NO	DESCRIPTION	SKETCH	QTY
A	HEADBOARD PANEL		1 PC
B	FOOTBOARD		1 PC
C	LEG LSF BED POST		1 PC
D	LEG RSF BED POST		1 PC
E	BED SLAT		4 PCS
F	BED SLAT SUPPORT		8 PCS

SH2600K-1 HARDWARE LIST				
NO	DESCRIPTION	SKETCH	SIZE	QTY
1	ALLEN KEY		M4 x 65MM	1 PC
2	ALLEN KEY		M5 x 65MM	1 PC
3	JCBC BOLT		M6 x 35MM	6 PCS
4	SPRING WASHER		1/4" x 2mm(Thickness)	6 PCS
5	FLAT WASHER		1/4" ID x 13mm x 1mm(Thickness)	6 PCS
6	CSK SCREW		M4 x 32MM	8 PCS

SH2600-3 PARTS LIST			
NO	DESCRIPTION	SKETCH	QTY
G	SIDE RAIL		2 PCS


***ABOVE HARDWARE ARE PACKED IN SH2600K-1 FOR ASSEMBLY**

MADE IN MALAYSIA


NOTE: Must tighten screws periodically with use screws will become loose. Check tightness of all screws every 6-8 weeks.

DO NOT TIGHTEN BOLTS UNTIL COMPLETELY ASSEMBLED.

STEP 1 :

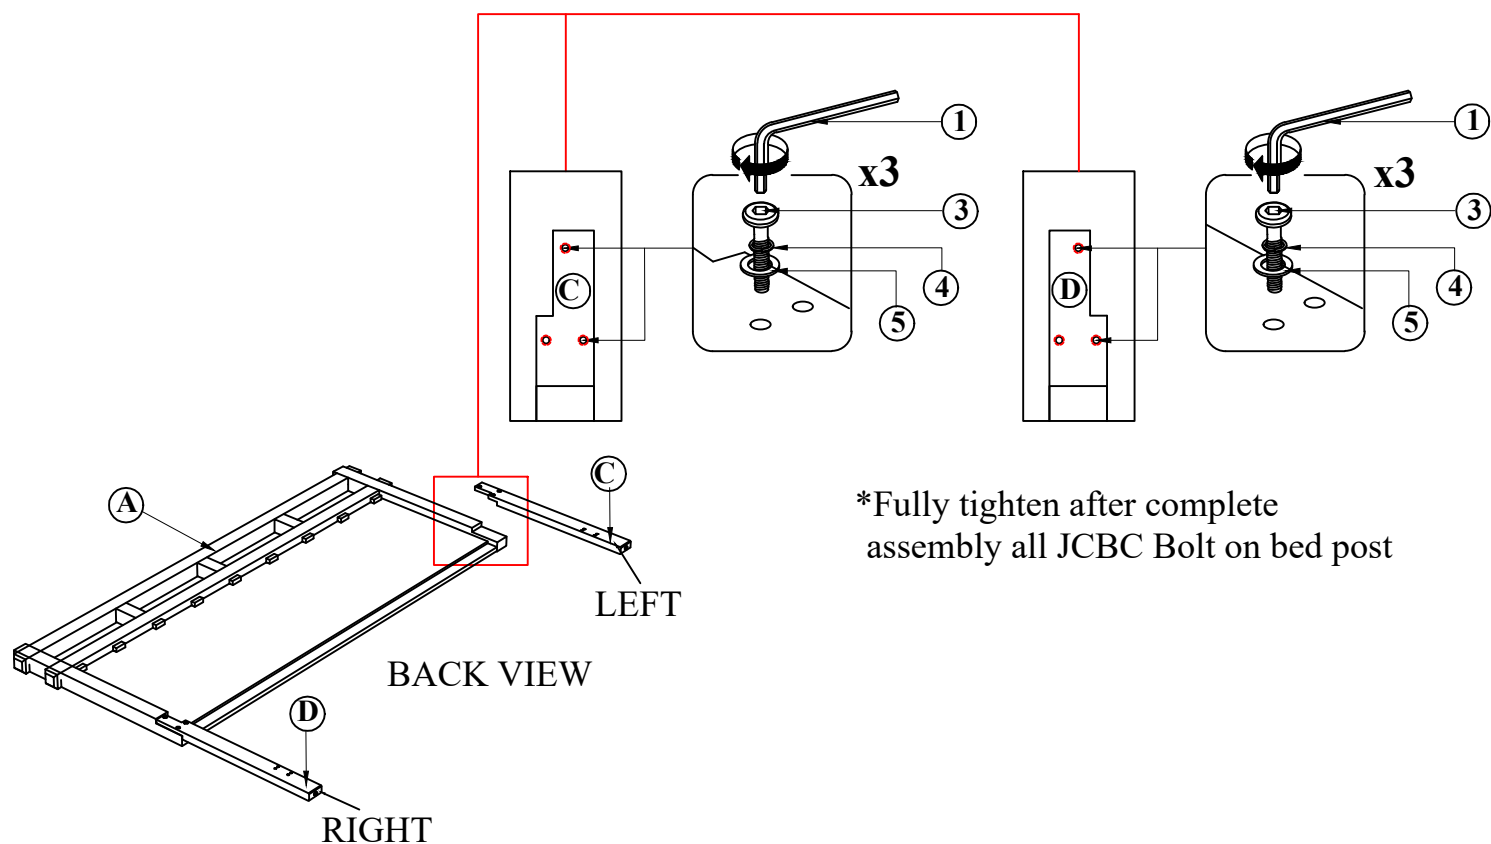

STEP 2 :

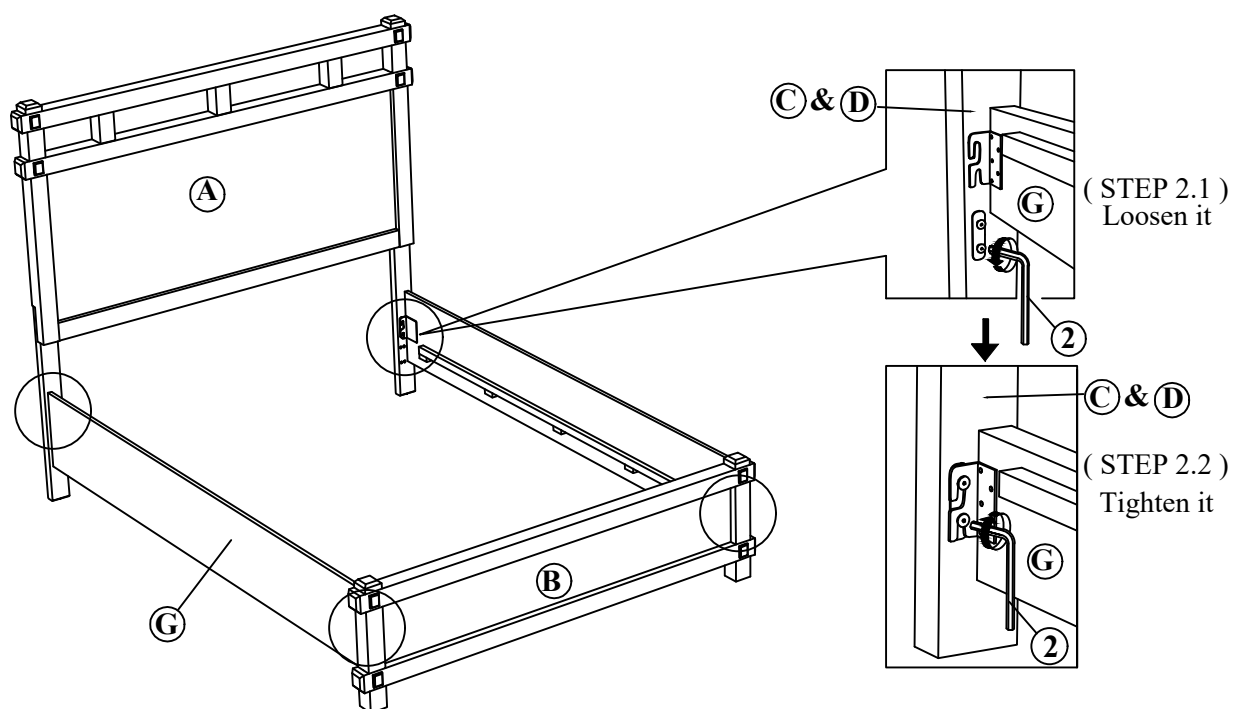


Loose The Jcbc bolt screw on each Headboard Post(A) and Footboard(B) leg before Hook up side rail.

MADE IN MALAYSIA


NOTE: Must tighten screws periodically with use screws will become loose. Check tightness of all screws every 6-8 weeks.

DO NOT TIGHTEN BOLTS UNTIL COMPLETELY ASSEMBLED.

STEP 3 :

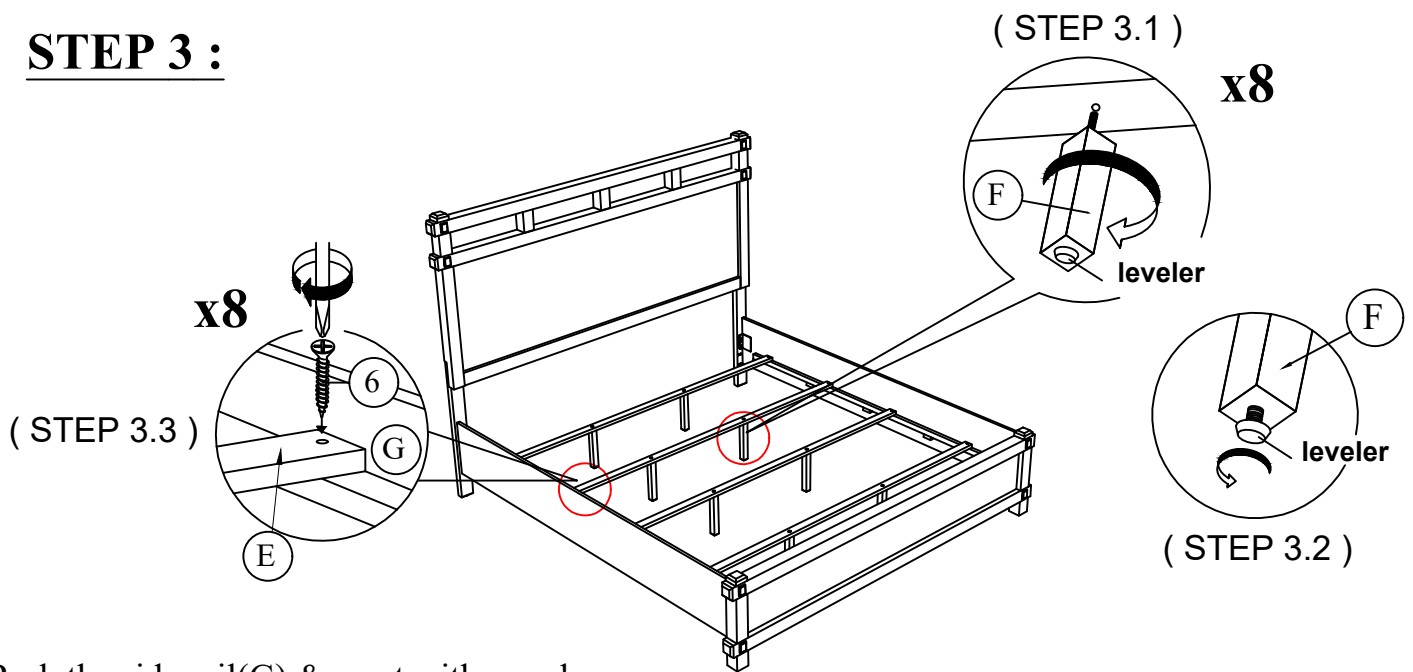

Push the side rail(G) & meet with wooden slat(E) and fix the CSK screw (6) by using the Screw Driver.

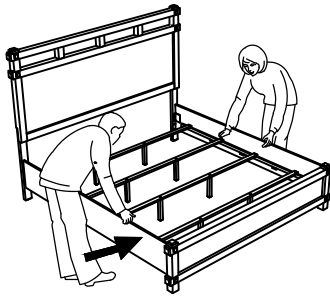


NOTE:

1-Push the side rail inward until the slats are flush and resting on the side rail support then fasten each slat to the side rail support using the provided screw.

2-The side rail warpage is a temporary condition, it will straighten out once the bed is fully assembled.

STEP 4 :

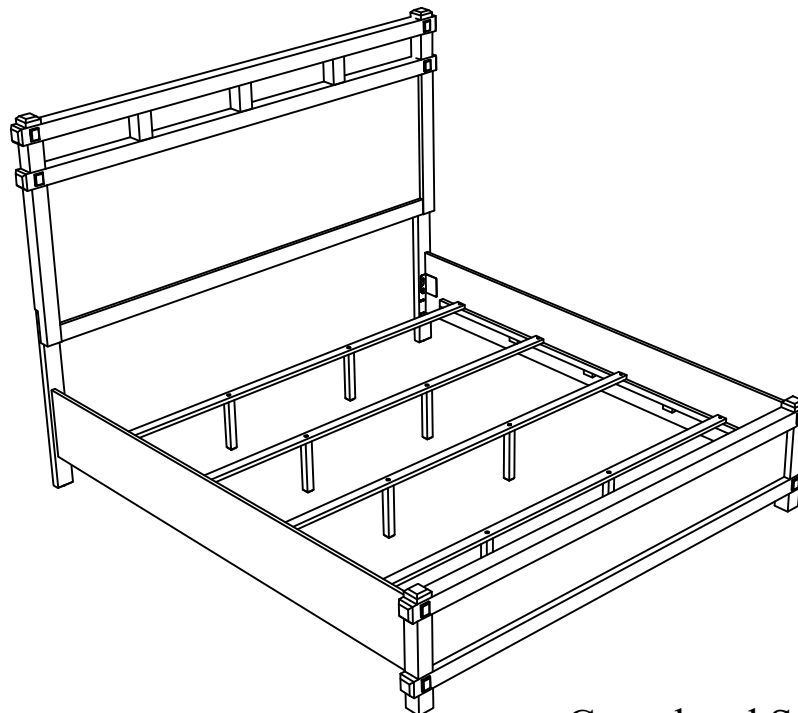

Completed Setup Assembly

MADE IN MALAYSIA

NOTE: Must tighten screws periodically with use screws will become loose. Check tightness of all screws every 6-8 weeks.

DO NOT TIGHTEN BOLTS UNTIL COMPLETELY ASSEMBLED.