
SH553WHSB-1 / SH553BKSB-1 / SH553GYSB-1 Step Bunk Bed Headboard, Footboard and Slats. SH553WHSB-2 / SH553BKSB-2 / SH553GYSB-2 Step Bunk Bed Side Rails and Guard Rails.

SH553WHSB-3 / SH553BKSB-3 / SH553GYSB-3 Step Bunk Bed Staircase and Storage Drawers.

Thank you for purchasing this product. Please take time to read and follow the instructions **PART LIST** below. Check that you have all parts and hardware before assembly. Parts apparently missing are often found in the packing materials. If you do not have all the parts listed, have your dealer contact us and they will be send to you immediately. It is recommended to install protective pads under all legs and supports to avoid damage or scratches when placing furniture on a wood floor or other hard surface, and to limit indentation and prevent discoloration if placing on carpet. Hardware may loosen over time. Periodically check to make sure all connection are Lower Left Leg 2pcs Lower Right Leg 2pcs Headboard / Footboard 2pcs Bottom Vertical Bar 2pcs tight. Re-tighten if necessary. DO NOT TIGHTEN BOLTS UNTIL COMPLETELY ASSEMBLED. Upper Left Headboard Leg 1pc Upper Right Headboard Leg 1pc Upper Headboard 1set Top Vertical Bar 1pc Box 1 **Option 1** Option 2 HARDWARE LIST Top Vertical Bar 1pc Upper Left Footboard Leg 1pc Upper Right Footboard Leg 1pc Short Guard Rail 1pc M6 x L110 mm M6 x L90 mm M6 x L35 mm M6 x 12mm Upper Slats Pack 1Set Lower Slats Pack 1Set Allen Bolts 16pcs Allen Head Bolts 14pcs Allen Bolts 30pcs Hole Bolts 40pcs Support Legs 4 pcs Big Footboard Cross Bar 1pc (13Pcs/Set) (13Pcs/Set) Ε G Η 17 Ø4 x L30 mm Ø4 x L25 mm Ø4 x L15 mm Ø6 x L30 mm Screws 143 pcs Screws 6 pcs Screws 56 pcs Screws 24 pcs Small Footboard Cross Bar 1p K 18 Box 2 Ø10 x L100 mm Ø8 x L30 mm Allen Key 1 pc Lower Side Rail 2pcs Upper Side Rail 2pcs Metal Dowel 4 pcs Dowel 125 pcs Guard Rail Bars 4pcs Guard Rail Support 2pcs

SH553WHSB-1 / SH553BKSB-1 / SH553GYSB-1 Step Bunk Bed Headboard, Footboard and Slats. SH553WHSB-2 / SH553BKSB-2 / SH553GYSB-2 Step Bunk Bed Side Rails and Guard Rails. SH553WHSB-3 / SH553BKSB-3 / SH553GYSB-3 Step Bunk Bed Staircase and Storage Drawers.

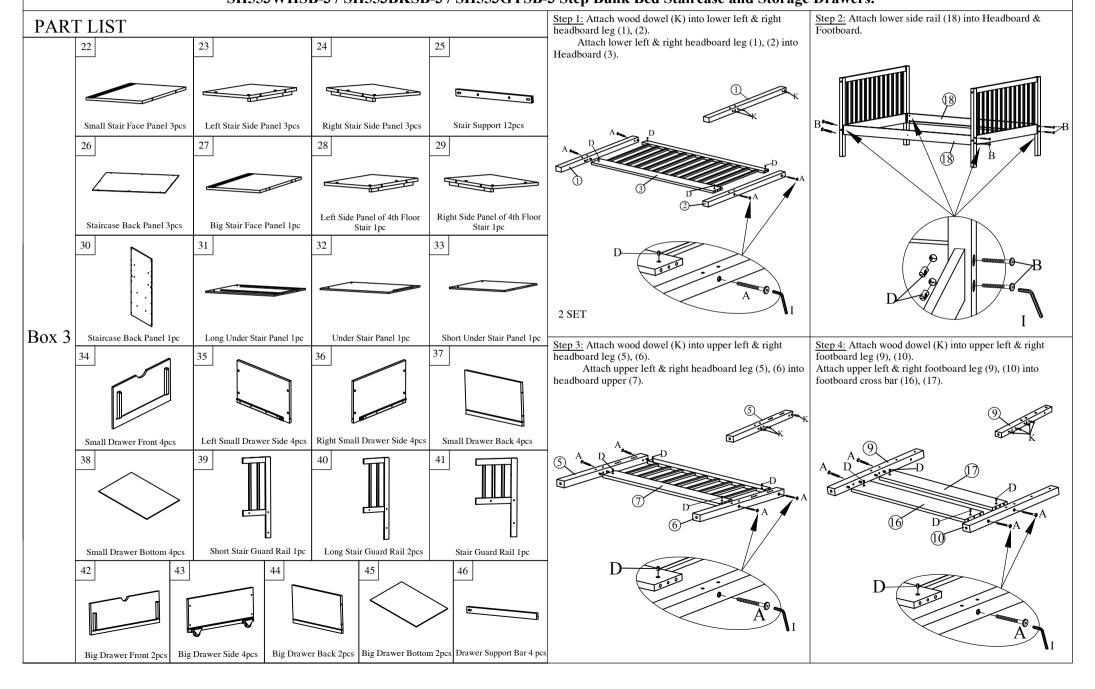


SH553WHSB-1 / SH553BKSB-1 / SH553GYSB-1 Step Bunk Bed Headboard, Footboard and Slats. SH553WHSB-2 / SH553BKSB-2 / SH553GYSB-2 Step Bunk Bed Side Rails and Guard Rails. SH553WHSB-3 / SH553BKSB-3 / SH553GYSB-3 Step Bunk Bed Staircase and Storage Drawers.

Step 5: Attach wood dowel (K) into guard rail bars (20).

Attach guard rail bars (20) & upper side rail (19) into headboard & footboard upper.


Step 6: Attach Guard rail support (21) into railing frame.

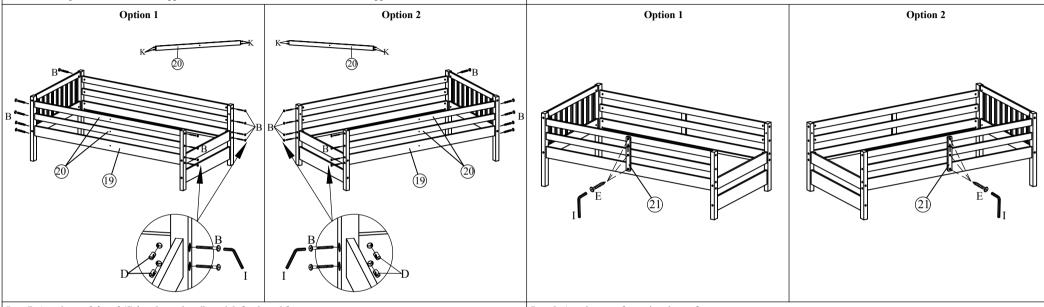

Step 7: Attach wood dowel (J) into lower headboard & footboard frame.

Attach Bottom vertical bar (4) into lower headboard & footboard frame.

Step 8: Attach upper frame into lower frame.

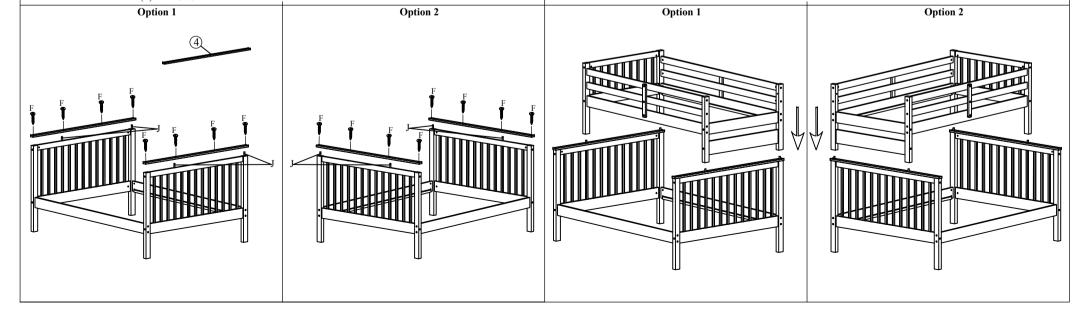


SH553WHSB-1 / SH553BKSB-1 / SH553GYSB-1 Step Bunk Bed Headboard, Footboard and Slats. SH553WHSB-2 / SH553BKSB-2 / SH553GYSB-2 Step Bunk Bed Side Rails and Guard Rails.

SH553WHSB-3 / SH553BKSB-3 / SH553GYSB-3 Step Bunk Bed Staircase and Storage Drawers.


Step 9: Attach Short guard rail (11) into upper footboard frame.


Step 10: Attach wood dowel (K) into upper headboard & footboard frame. Attach top vertical bar (8), (12) into upper headboard & footboard frame.

Option 1

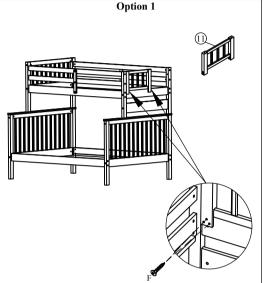


Step 11: Attach wood dowel (K) into stair support (25). Attach stair support (25) into left & right stair side panel (23), (24).

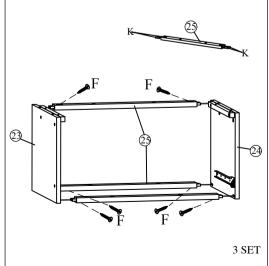


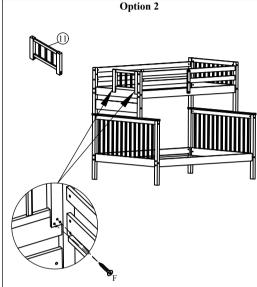


Step 12: Attach wood dowel (K) into left & right stair side panel (23), (24).


Attach small stair face panel (22) into left & right stair side panel (23), (24).

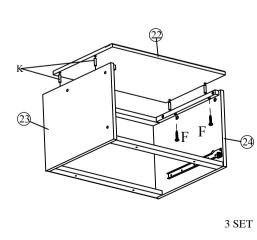

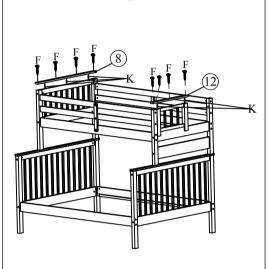


Step 13: Attach staircase back panel (26) into staircase box. Step 14: Assembly small drawer.

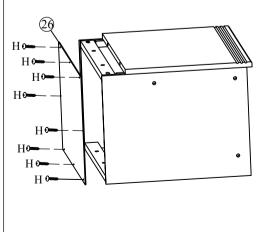

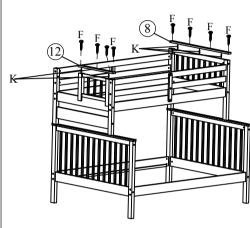


Option 2

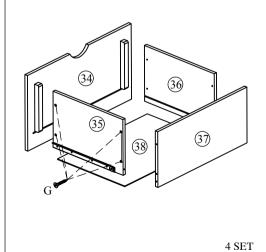

3 SET


SH553WHSB-1 / SH553BKSB-1 / SH553GYSB-1 Step Bunk Bed Headboard, Footboard and Slats. SH553WHSB-2 / SH553BKSB-2 / SH553GYSB-2 Step Bunk Bed Side Rails and Guard Rails. SH553WHSB-3 / SH553BKSB-3 / SH553GYSB-3 Step Bunk Bed Staircase and Storage Drawers.

Step 15: Attach wood dowel (K) into stair support (25). Attach stair support (25) into left & right stair side panel (28), (29).

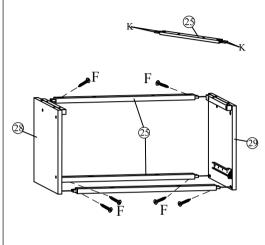


Step 16: Attach wood dowel (K) into left & right stair side panel (28), (29).

Attach big stair face panel (27) into left & right stair side panel (28), (29).

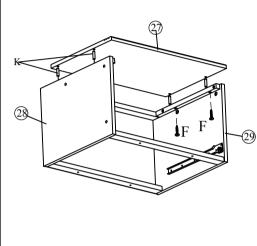

Step 17: Attach wood dowel (K) into big under stair panel (31).


Attach long under stair panel (31) into staircase back panel (30) & staircase box.

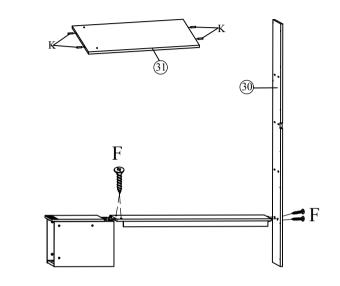



Step 18: Attach staircase frame into footboard frame.


Step 19: Attach wood dowel (K) into under stair panel (32).

Attach under stair panel (32) into staircase back panel (30) & staircase box.

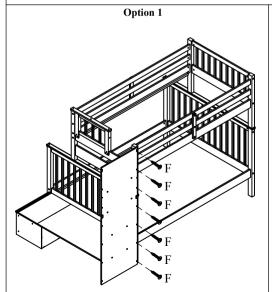

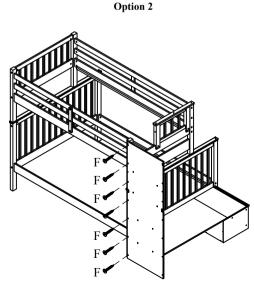

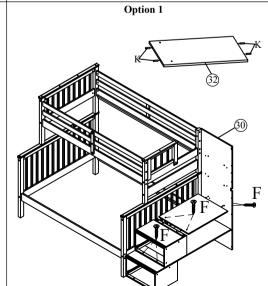

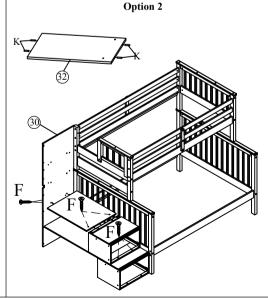



SH553WHSB-1 / SH553BKSB-1 / SH553GYSB-1 Step Bunk Bed Headboard, Footboard and Slats. SH553WHSB-2 / SH553BKSB-2 / SH553GYSB-2 Step Bunk Bed Side Rails and Guard Rails. SH553WHSB-3 / SH553BKSB-3 / SH553GYSB-3 Step Bunk Bed Staircase and Storage Drawers.

Step 20: Attach wood dowel (K) into small under stair panel (33).

Attach short under stair panel (33) into staircase back panel (30) & staircase box.


Step 21: Attach wood dowel (K) into staircase box.
Attach staircase box into staircase back panel (30).

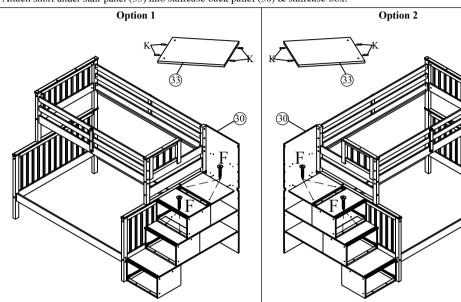


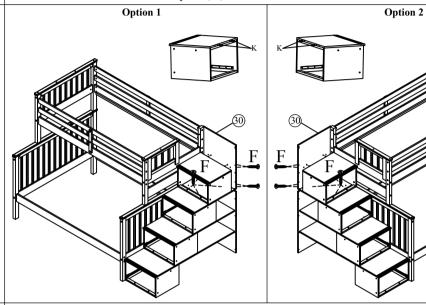



Step 22: Attach small drawer into staircase box.

Step 23: Attach short stair guard rail (39) into staircase frame.

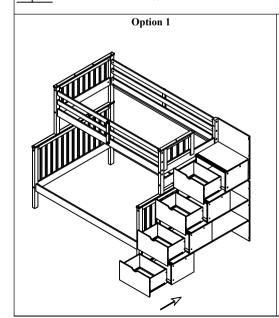

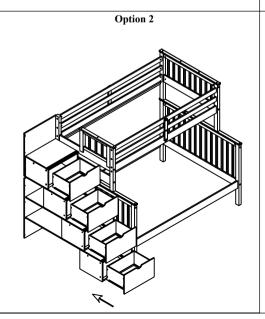

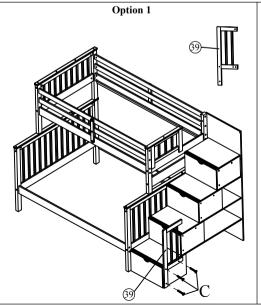

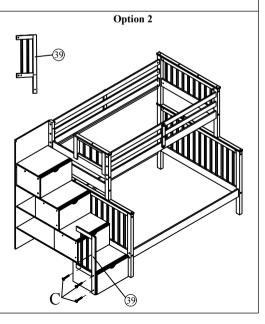

SH553WHSB-1 / SH553BKSB-1 / SH553GYSB-1 Step Bunk Bed Headboard, Footboard and Slats. SH553WHSB-2 / SH553BKSB-2 / SH553GYSB-2 Step Bunk Bed Side Rails and Guard Rails.

SH553WHSB-3 / SH553BKSB-3 / SH553GYSB-3 Step Bunk Bed Staircase and Storage Drawers. Step 25: Attach long stair guard rail (40) into staircase frame. Step 24: Attach long stair guard rail (40) into staircase frame. Option 1 Option 2 Option 1 Option 2 Step 26: Attach stair guard rail (41) into staircase frame. Step 27: Attach upper slats (13) into upper frame. Option 1 Option 2 Option 1 Option 2

SH553WHSB-1 / SH553BKSB-1 / SH553GYSB-1 Step Bunk Bed Headboard, Footboard and Slats. SH553WHSB-2 / SH553BKSB-2 / SH553GYSB-2 Step Bunk Bed Side Rails and Guard Rails. SH553WHSB-3 / SH553BKSB-3 / SH553CVSB-3 Step Bunk Bed Steirage and Storage Drawers.

SH553WHSB-3 / SH553BKSB-3 / SH553GYSB-3 Step Bunk Bed Staircase and Storage Drawers. Step 29: Assembly big drawer. Step 28: Attach lower slats (14) into lower frame. Attach Support legs (15) into lower slats (14). Option 1 Option 2 2 SET Step 30: Put 2 pcs Storage box into step bunk bed. Option 1 COMPLETED Option 2 COMPLETED