

ASSEMBLY INSTRUCTIONS

GROUP NO: SH228 - UPH QUEEN BED

ITEM NO : SH228-1 - Upholstered PU Queen Headboard

SH228-3 - Upholstered PU Queen Footboard & Side Rail w/slats

Thank you for purchasing this product. Please take time to read and follow the instructions below. Check that you have all parts and hardware before assembly. Parts apparently missing are often found in the packing materials. If you do not have all the parts listed, have your dealer contact us and they be sent to you immediately.

▲ It is recommended to install protective pads under all legs and supports to avoid damage or scratches when placing furniture on a wood floor or other hard surface, and to limit indentation and prevent discoloration if placing on carpet.



HARDWARE LIST FOR HEADBOARD:

No.	Description	Sketch	Size	Quantity
1	Allen Bolt		Ø5/16" x 45mmL	6 PCS
2	Spring washer		Ø5/16"	6 PCS
3	Flat washer		Ø5/16" x 19mm	6 PCS
4	Allen Key		4mm	1 PC

HARDWARE LIST FOR SIDE RAIL & FOOTBOARD:

No.	Description	Sketch	Size	Quantity
6	Allen Bolt		Ø5/16" x 45mmL	2 PCS
7	Spring washer		Ø5/16"	2 PCS
8	Flat washer		Ø5/16" x 19mm	2 PCS
9	Allen Key		4mm	1 PC
10	Screw		#8 x 30mmL	6 PCS
11	Hex Nut		Ø5/16"	8 PCS
12	Curve Washer		Ø5/16"	8 PCS
13	Thread Bolt		Ø5/16" x 80mmL	8 PCS
14	Open Wrench			1 PC
15	Wood Dowel		Ø10 x 40mmL	2 PCS

PARTS LIST:

No.	Description	Sketch	Quantity
A	Headboard		1 PC
B	Post (L/R)		2 PCS
C	Footboard		1 PC
D	Side Rail (L/R)		2 PCS
E	Slats		3 PCS
F	Support Legs		3 PC
G	Bun Foot		2 PCS

ASSEMBLY INSTRUCTIONS


GROUP NO: SH228 - UPH QUEEN BED

ITEM NO : SH228-1 - Upholstered PU Queen Headboard

SH228-3 - Upholstered PU Queen Footboard & Side Rail w/slats


STEP 1:

Attach the Posts (L/R) (B) to the Headboard (A) by using Allen Bolt (1), Spring Washer (2), Flat Washer (3) and Allen Key (4).

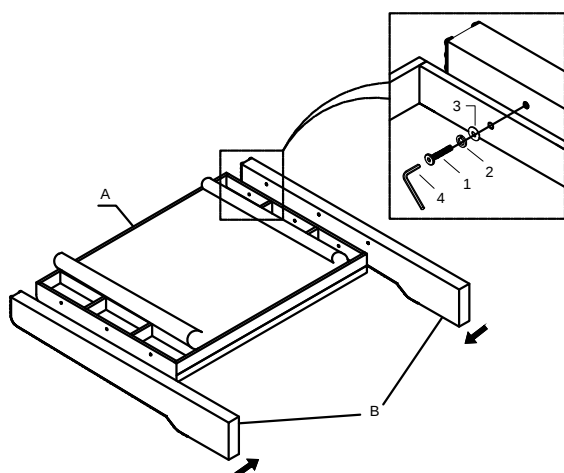


STEP 2:

Attach the Bun Foot (G) to the Footboard (C) by using Allen Bolt (6), Spring Washer (7), Flat Washer (8), Wood Dowel (15) and Allen Key (9).

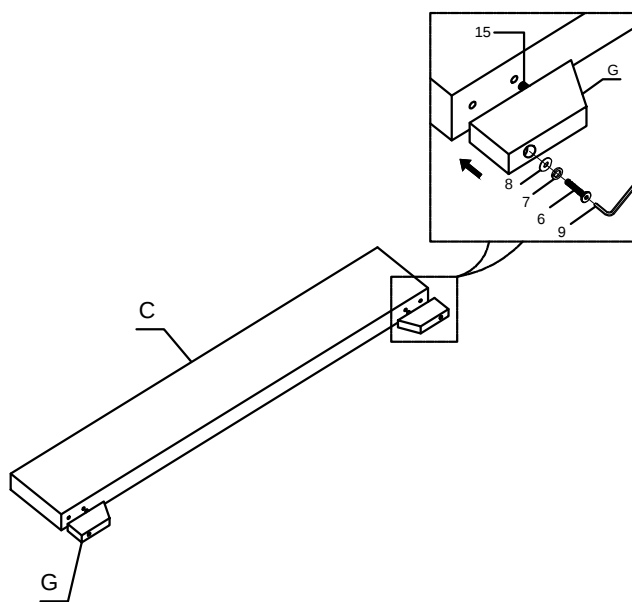


STEP 3:

Attach the Side Rail (D) to the Headboard (A) and Footboard (C) by using Thread Bolt (13), Curve Washer (12), Hex Nut (11) and Open Wrench (14).

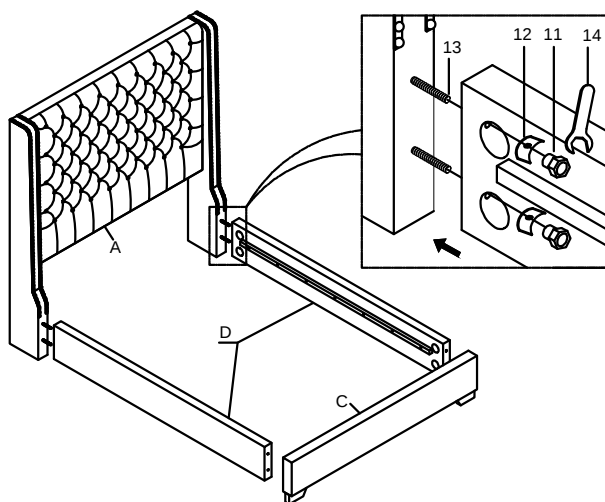

STEP 4:

Attach the Support Legs (F) to the Slats (E).

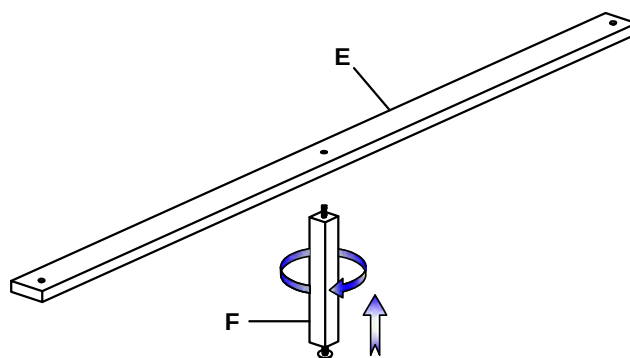

ASSEMBLY INSTRUCTIONS


GROUP NO: SH228 - UPH QUEEN BED

ITEM NO : SH228-1 - Upholstered PU Queen Headboard

SH228-3 - Upholstered PU Queen Footboard & Side Rail w/slats

STEP 4:

Attach the Slats (E) to the Side Rail (D) by using Screw (10).

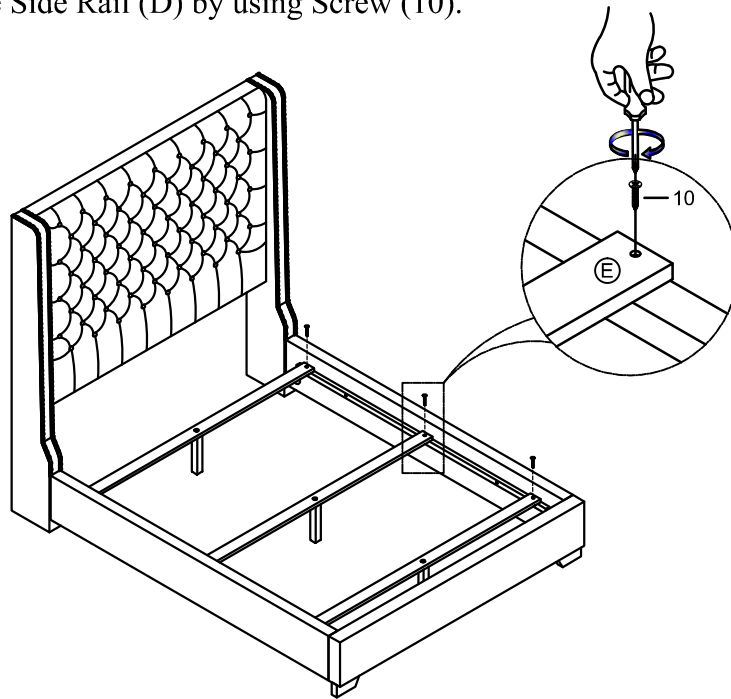

Assembly Complete

