



H O M E E L E G A N C E

Assembly Instruction Accent Chair

ITEM NO.: 1061DGY/BEG/BUE/TPE-1














Legs and hardware are stored in the chair seat, please take out for assembly.

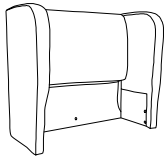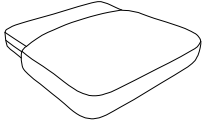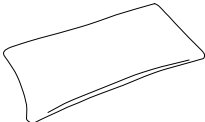Note: Do not use power tools for assembly. Power tools increase the risk of over tightening which lead to splitting or cracking the wood.


Do not tighten bolts until completely assembled.

Component list


No	Drawing	Qty	Description
A		1	Chair back
B		1	Chair Seat
C		1	Seat Cushion
D		1	Lumbar Pillow (22"*11")
E		4	Wooden Legs 7.08"*2.36"*1.46"
F		4	Gasket Ø1.85"
G		4	Bolts (Colored) 5/16"*55mm
H		1	Bolts(black) 5/16"*70mm
I		5	Flat Washers Ø22*Ø8*2mm
J		5	Lock Washers 5/16"*13*1.5mm
K		1	Allen Wrench M5*70*70mm

Step #1


LEGS AND HARDWARE ARE STORED IN THE CHAIR SEAT

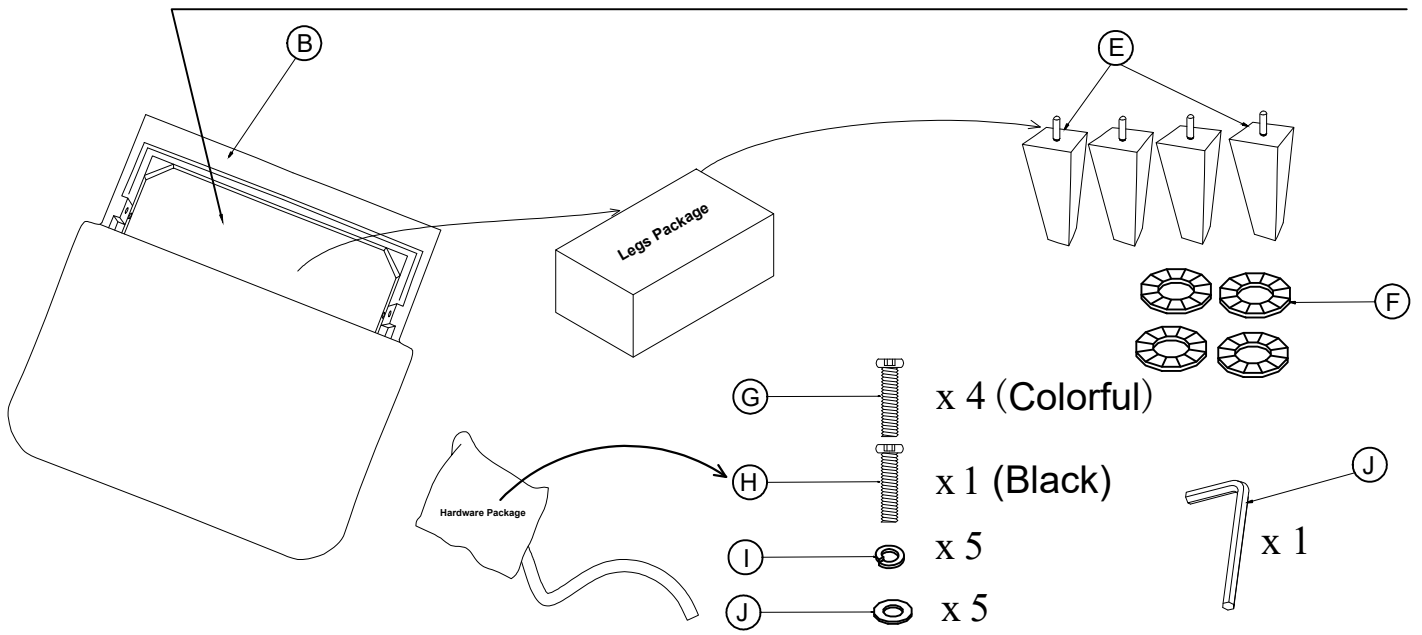


Step #2

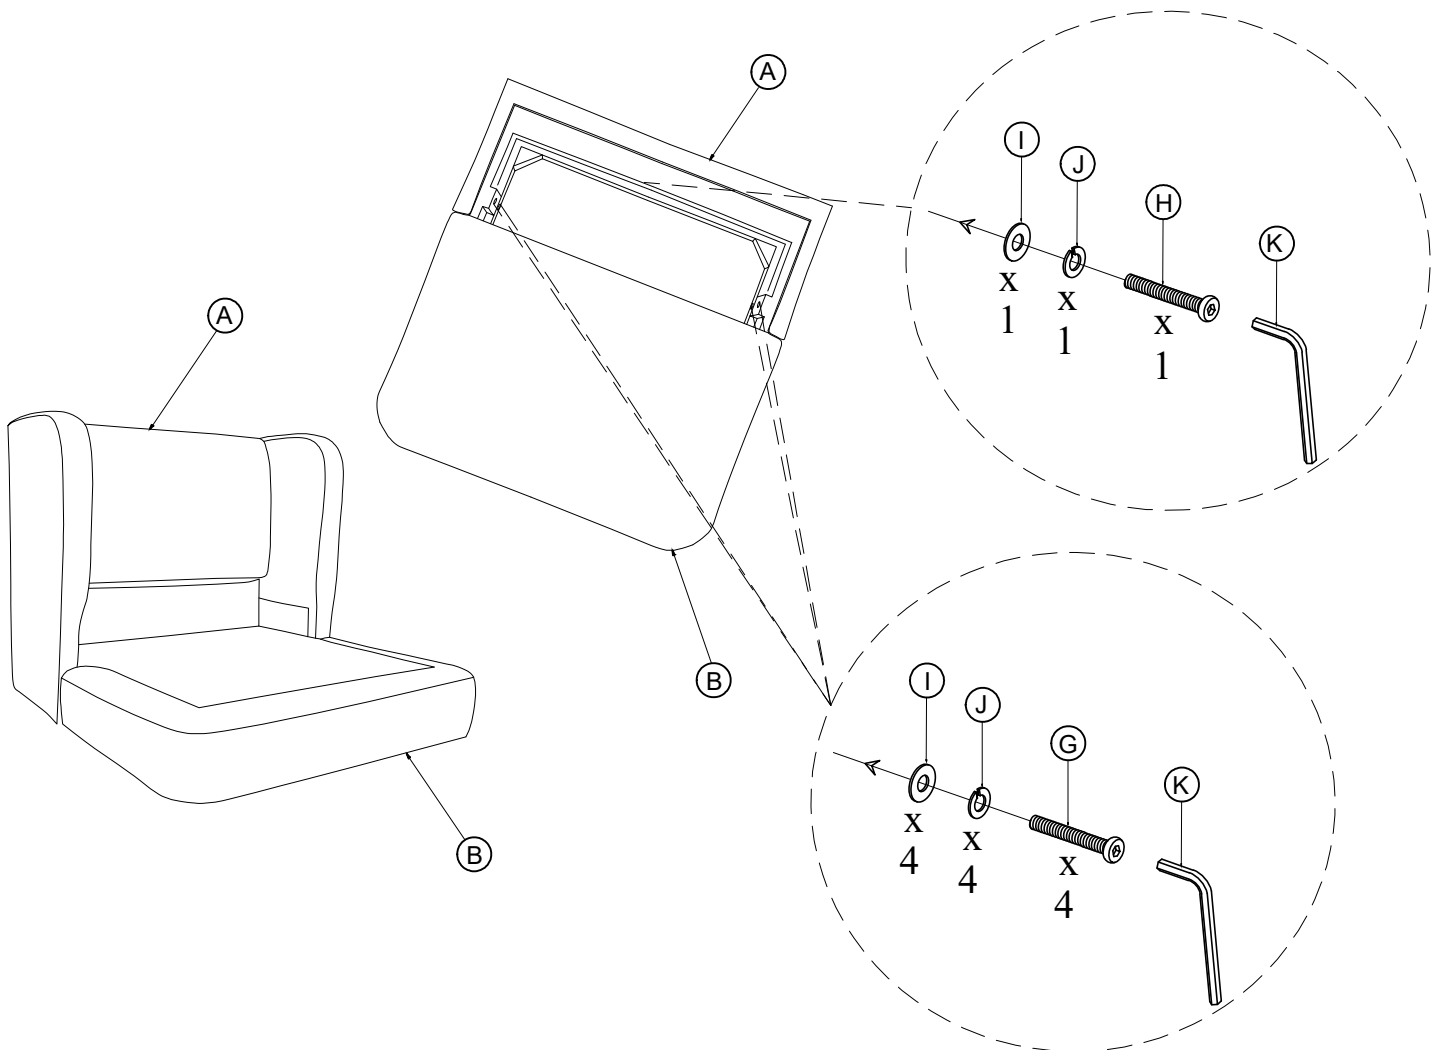


Step #3

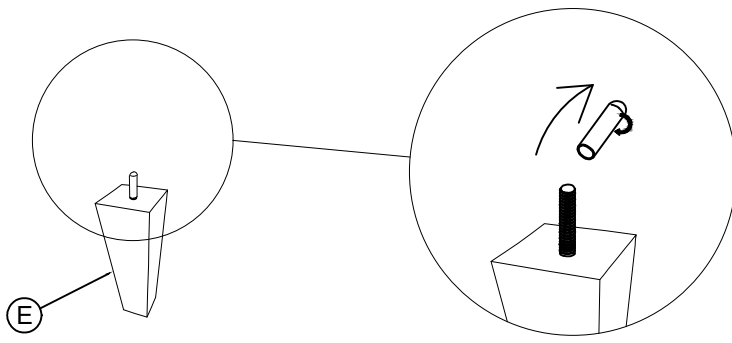

Step #4

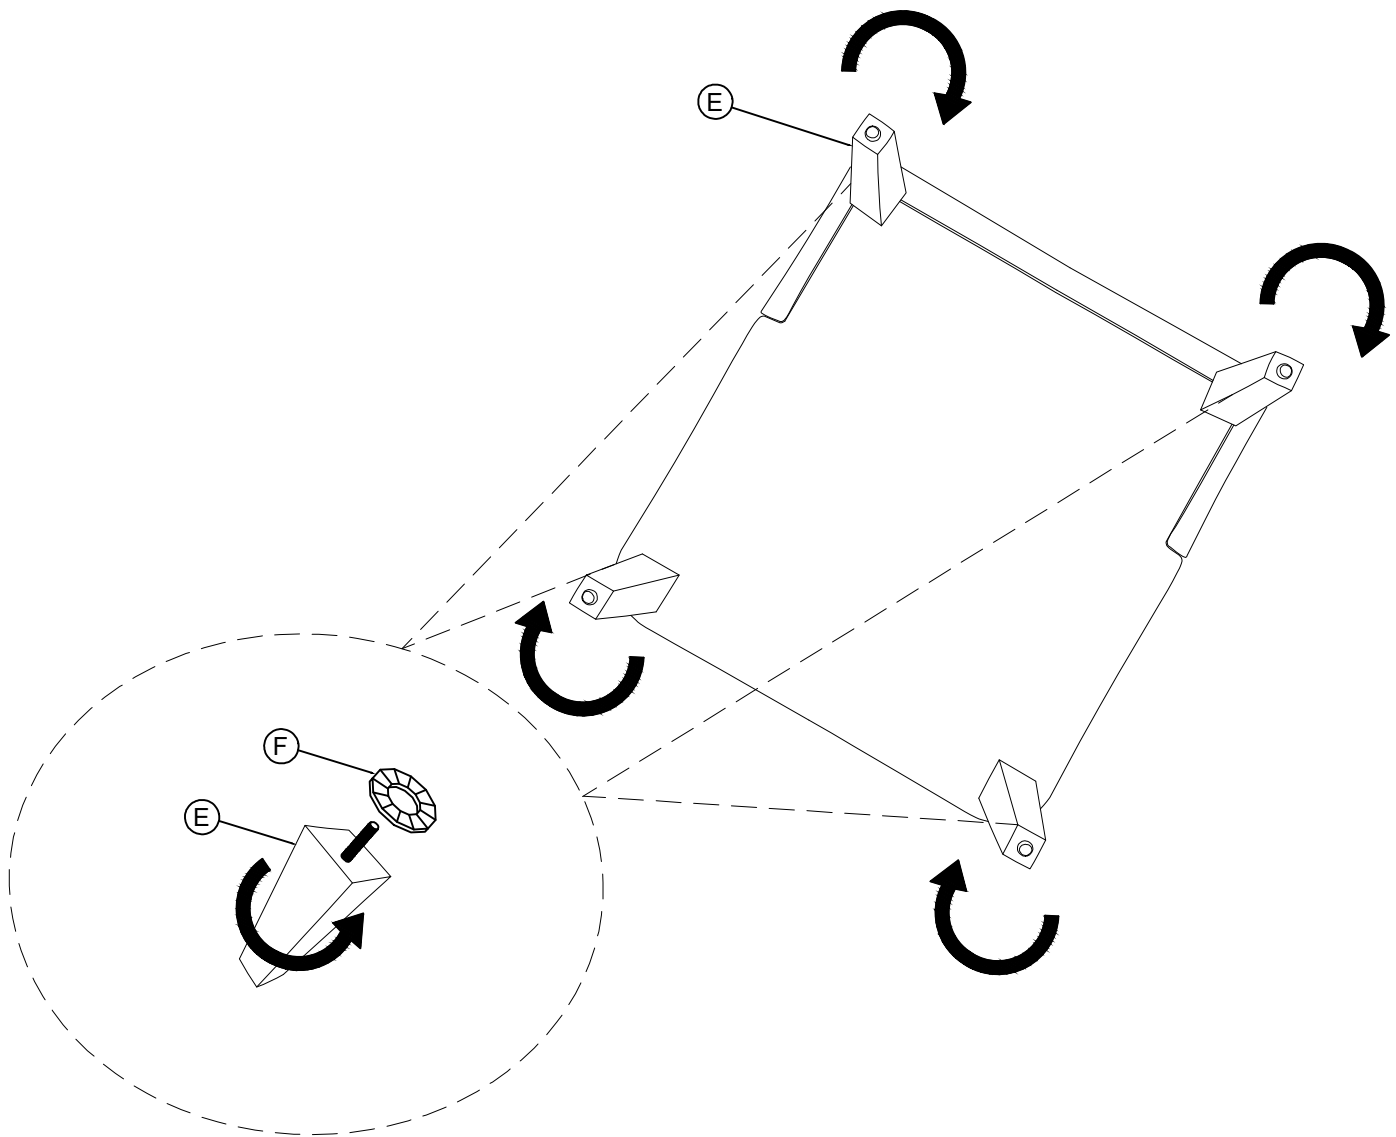

Step #5

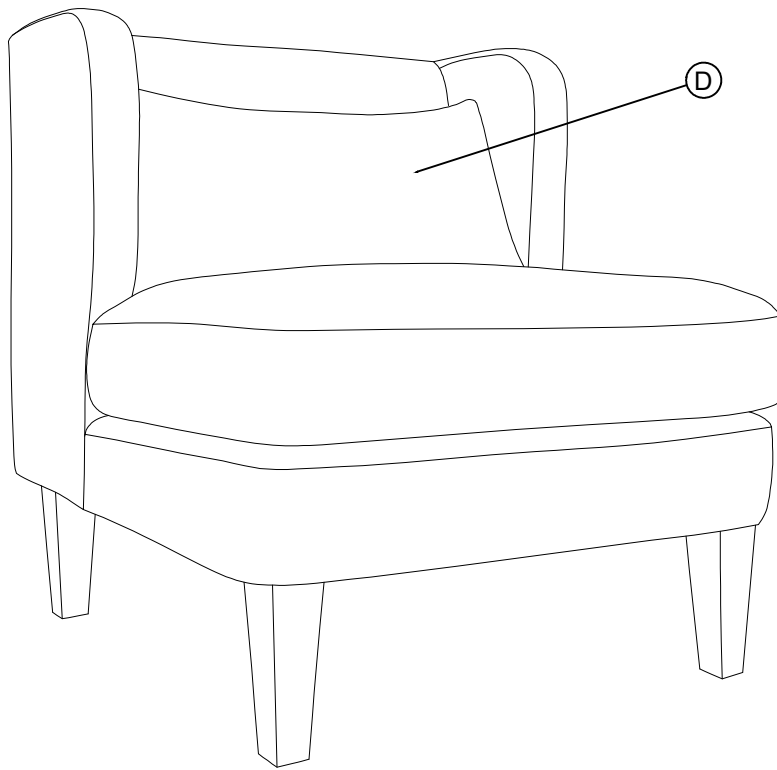

Care Instruction for Corduroy Furniture:

In order to maintain the original appearance of your Corduroy Furniture, please follow below simple care procedures:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Sunlight and or exposure to heating and air conditioning outlets will fade/damage Corduroy.
- Vacuum or wipe with a soft cloth to remove dust.
- Hardware may loosen over time. Periodically check to make sure all connection are tight, Re-tighten if necessary



For items use on wooden floor, hard surfaces or carpets, it is recommended to Install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.