
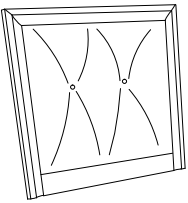
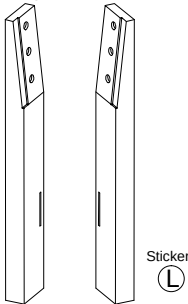


# ASSEMBLY INSTRUCTION / INSTRUCTION D' ASSEMBLAGE

| ITEM NUMBER : 2145T-1 Twin Headboard / Lit Jumeau |                                                                                                                                   |      |
|---------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------|------|
| NO                                                | Parts List / Liste de Pieces                                                                                                      | QTY  |
| 1                                                 | Headboard / Tête de Lit<br>                      | 1pc  |
| 2                                                 | Leg / Pied Gauche / Droit<br>                   | 2pcs |
| NO                                                | Hardware List / Liste de Quincaillerie                                                                                            | QTY  |
| A                                                 |  JCBC SCREW / BOULON<br>M6 x 35mm              | 6pcs |
| B                                                 |  SPRING WASHER<br>RONDELLE D'ARRET<br>Ø1/4"    | 6pcs |
| C                                                 |  FLAT WASHER<br>RONDELLE PLATE<br>Ø1/4" x 13mm | 6pcs |
| D                                                 |  L - KEY<br>CLÉ ALLEN<br>M4 x 65mm             | 1pc  |

## STEP 1 / ETAPE 1

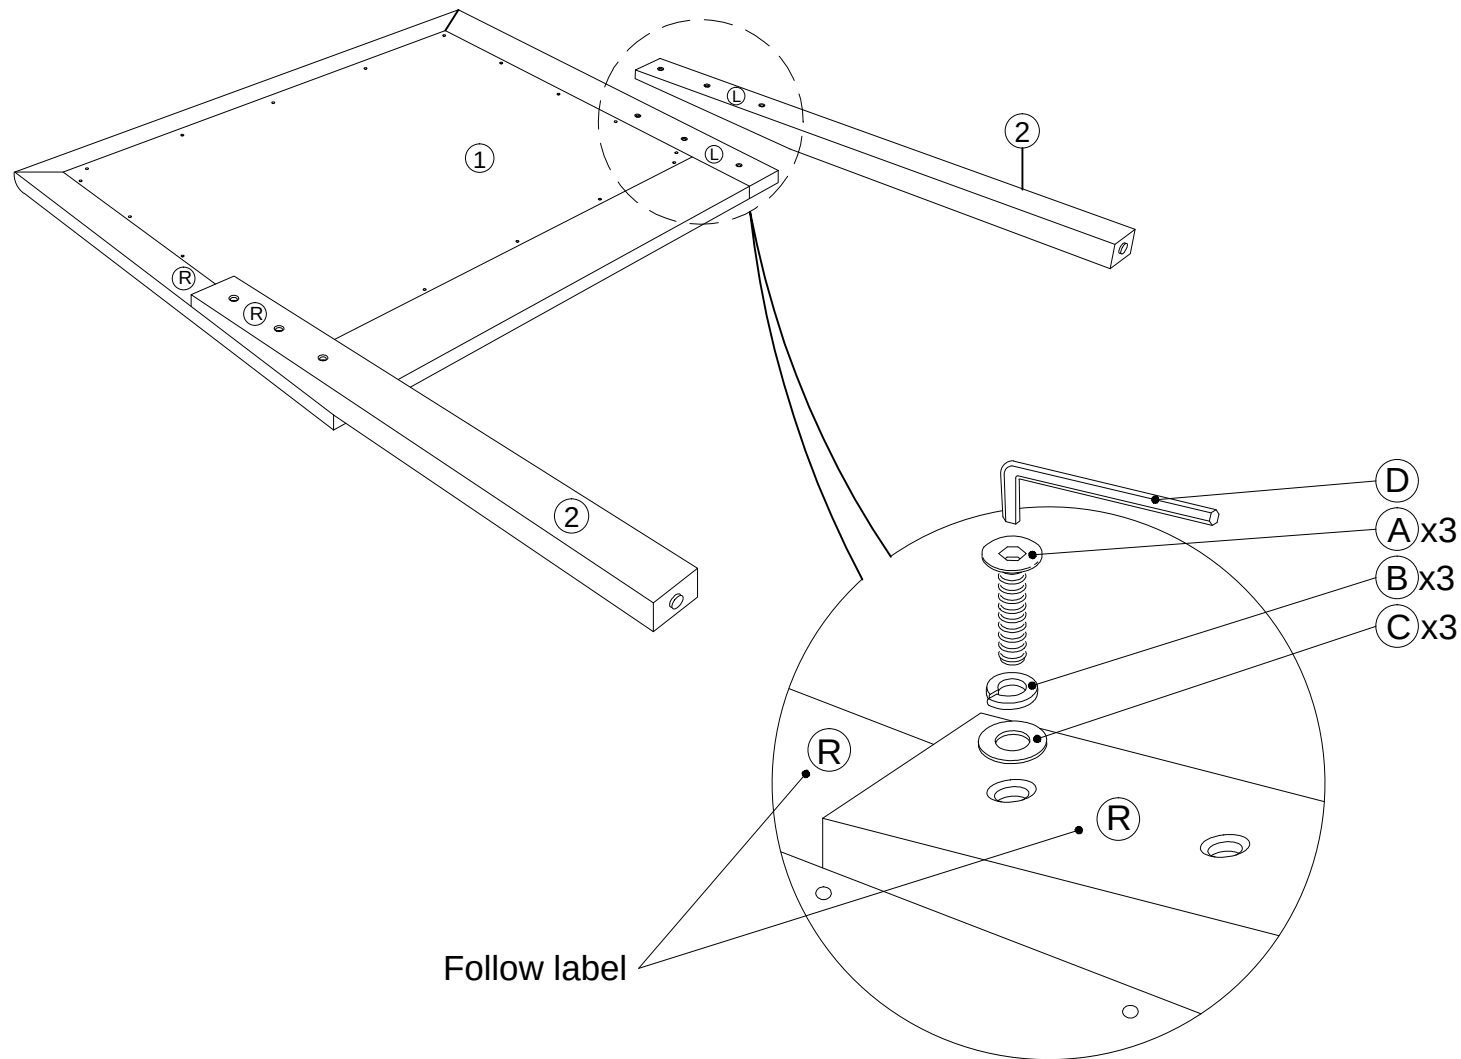

**For items use on wooden floor, hard surfaces or carpets, it is recommended to Install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.**

NOTE : AFTER A FEW DAYS OF ASSEMBLY, IT WILL HAVE ACCLIMATIZED TO THE ENVIRONMENT. PLEASE TIGHTEN ALL HARDWARE. CHECK TIGHTNESS OF ALL SCREWS EVERY 6-8 WEEKS.

NOTER : APRES QUELQUES JOURS DE L'ASSEMBLAGE, LE PRODUIT EST ACCLIMATISER À L'ENVIRONNEMENT. S'IL VOUS PLAÎT RESSERRER TOUT LA QUINCAILLERIE. VÉRIFIER ET RESSERRER TOUT LES VIS À TOUT LES 6-8 SEMAINES.