## **ASSEMBLY INSTRUCTION**



## **FULL BED**

ITEM NO: 1714NWF-1: (1/3) FULL BED HEADBOARD 1714NWF-2: (2/3) FULL FOOTBOARD & SLATS 1714NWF-3: (3/3) TWIN/FULL SIZE RAILS


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.


PART LISTS			
NO	Description	Sketch	Q'ty
A	Headboard		1 pc
B-1	RSF Headboard leg	<del></del>	1 pc
B-2	LSF Headboard leg		1 pc
C	Headboard cross bar		1 pc
D	Side rails		2 pcs
Е	Footboard		1 pc
F	Footboard bunfoot		2 pcs
G	Slat		4 pcs
Н	Slat support leg	<b>©</b>	4 pcs


HARDWARE PACK (PUT IN 1714NWF-1 CARTON)				
NO	Description	Sketch	Size	Q'ty
H1	Bolt		5/16"-18 x 1-3/8"	8 pcs
H2	Spring washer		0.314"ID x 0.583"OD x 0.078"TK	8 pcs
НЗ	Flat washer		0.344"ID x 0.688"OD x 0.065"TK	8 pcs
H4	Allen key		1/6"	1 pc


HARDWARE PACK (PUT IN 1714NWF-2 CARTON)				
NO	Description	Sketch	Size	Q'ty
F1	Screw	Dummu-	5/32" x 1-3/16"	8 pcs

	HARDWARE PACK (PUT IN 1714NWT-3 CARTON)				
NO	Description	Sketch	Size	Q'ty	
1	Thread rod		5/16"-18 x 3-1/8"	8 pcs	
2	Half moon washer		5/16"ID x 1-1/8" x 9/16" x 9/32"	8 pcs	
3	Hex nut		5/16"-1/2" x 9/16" x 17/64"TK	8 pcs	
4	Spring washer		0.314"ID x 0.583"OD x 0.078"TK	8 pcs	
5	Flat washer		0.344"ID x 0.688"OD x 0.065"TK	8 pcs	
6	Wrench		1/2"	1 pc	

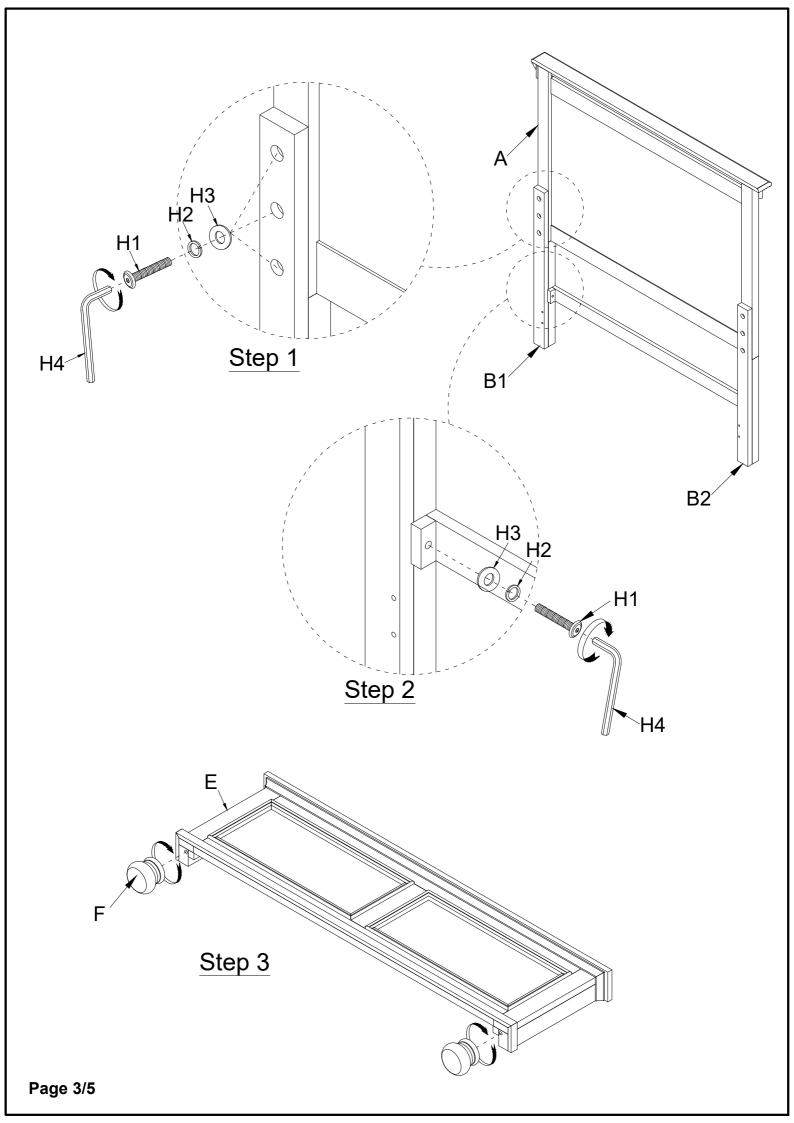

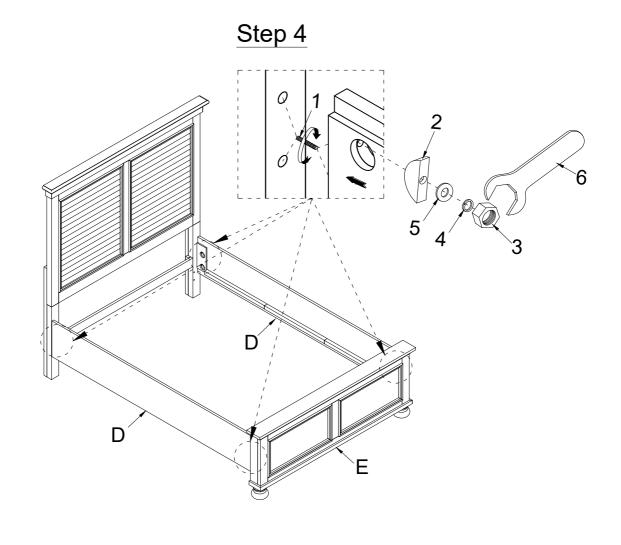

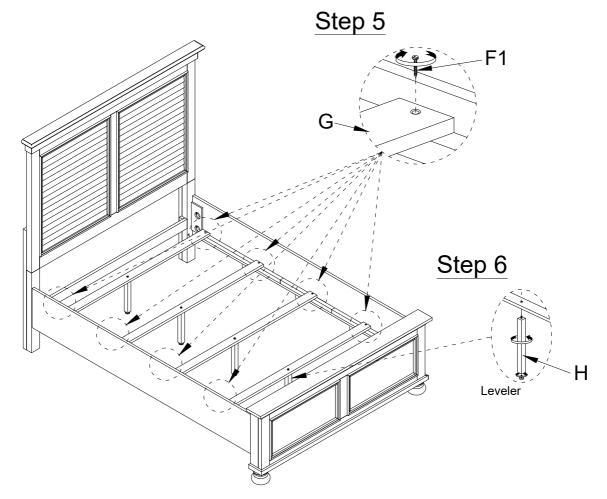

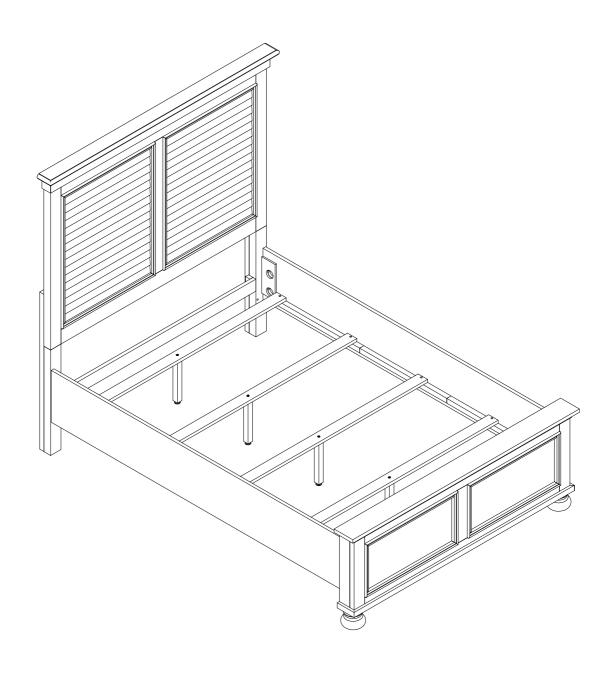

## COMPLETED

## DO NOT TIGHTEN BOLTS UNTIL COMPLETELY ASSEMBLED.

It is recommended to install protective pads under all legs and supports to avoid damage or scratches when placing furniture on a wood floor or other hard surface, and to limit indentation and preveant discoloration if placing on carpet.