




HOMELEGANCE


PART LIST:

ASSEMBLY INSTRUCTION


B2013DC-R Twin Trundle unit

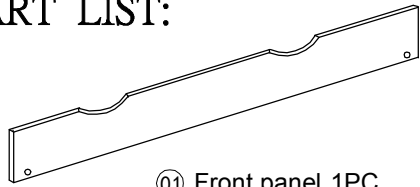


01 Front panel 1PC

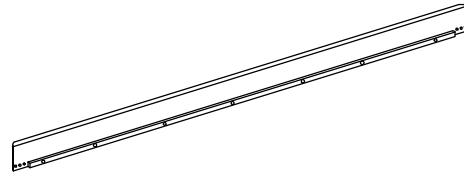

02 Back Rail 1PC




03 Stretcher 2PCS




04 Slat 12 PCS


STEP 1

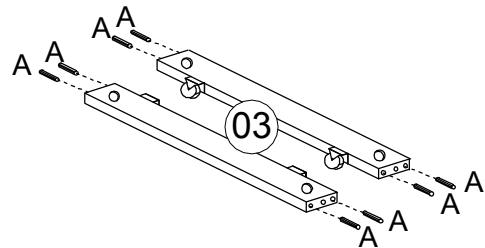


STEP 2

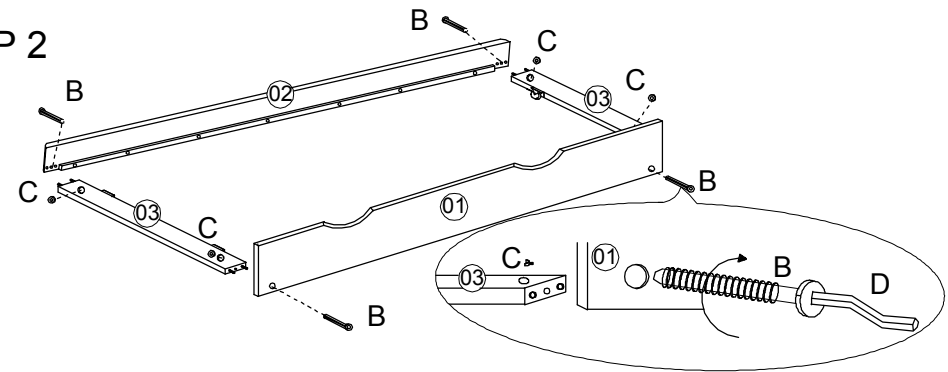

STEP 3

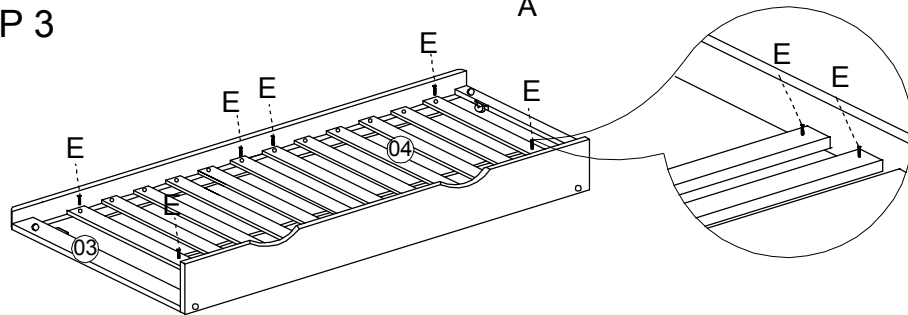

COMPLETED!

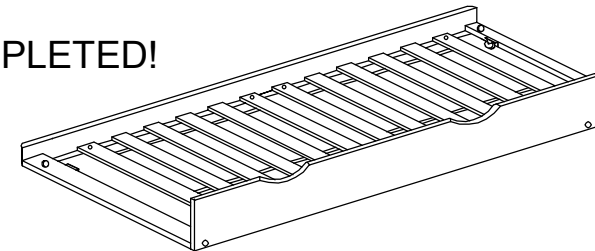

HARDWARE LIST

A		Wood dowel	1 3/16"	8PCS	D		Wrench		1PC
B		Bolt	1/4"X2 3/4"	4PCS	E		Screw	5/32"X1 3/8"	24PCS
C		Washer		4PCS					