
ASSEMBLY INSTRUCTION

ITEM NO: SH2859-5 DRESSER SH2859-6 MIROR

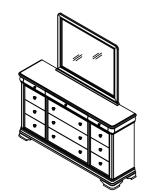


Thank you for purchasing this product. Please take time to read and follow instructions below. Check that you have all parts and hardware before assembly. Parts apparently missing are often found in packing materials. If you do not have all parts listed, have your dealer contact us and they will be sent to you immediately.

▲ It is recommended to install protective pads under all legs and supports to avoid damage or scratches when placing furniture on a wood floor or other hard surface, and to limit indentation and prevent discoloration if placing on carpet.

A Hardware may loosen over time. Periodically check to make sure all connections are tight. Re-tighten if necessary.

| | SH2859-5 PART LIST | | | SH2859-5 HARDWARE LIST | | | | | |
|--|----------------------------|-----------|--------------------|---|----|----|---------------|-----------------------------|------|
| Tipping restraint hardware kit is included with | NO | SKETCH | DESCRIPTION | Q'TY | NO | sк | ЕТСН | DESCRIPTION | Q'T' |
| this product. Refer to installation instruction in the hardware pack. *ANTI-TIPPING HARDWARE PACK IS AT THE BACK PANEL. | A | | DRESSER | 1 pc | 1 | | | TIPPING RESTRAINT | 1 s∈ |
| | SH2859-6 PARTS LIST | | | | | | | | |
| | NO SKETCH DESCRIPTION Q'TY | | | *SCREWDRIVER (NOT PROVIDED) SH2859-6 HARDWARE LIST | | | | | |
| | в | \square | MIRROR | 1 pc | NO | | | | |
| | | | | | 2 | ►0 | BOLT | Ø1/4"-20x1 1/2" | 8 p |
| | С | | MIRROR SUPPORTS | 2 pcs | 3 | 0 | SPRING WASHER | Ø1/4" x 1/2" x 9/32" x 1/12 | 8 p |
| | | | | | 4 | 0 | FLAT WASHER | Ø1/4" x 3/4" x 9/32" x 5/64 | 8 p |
| | | | | | 5 | | ALLEN KEY | 5/32 x 2 1/4" | 1 p |
| | B A | C | | | | | B OD | | |
| * | | | | | | | | | |

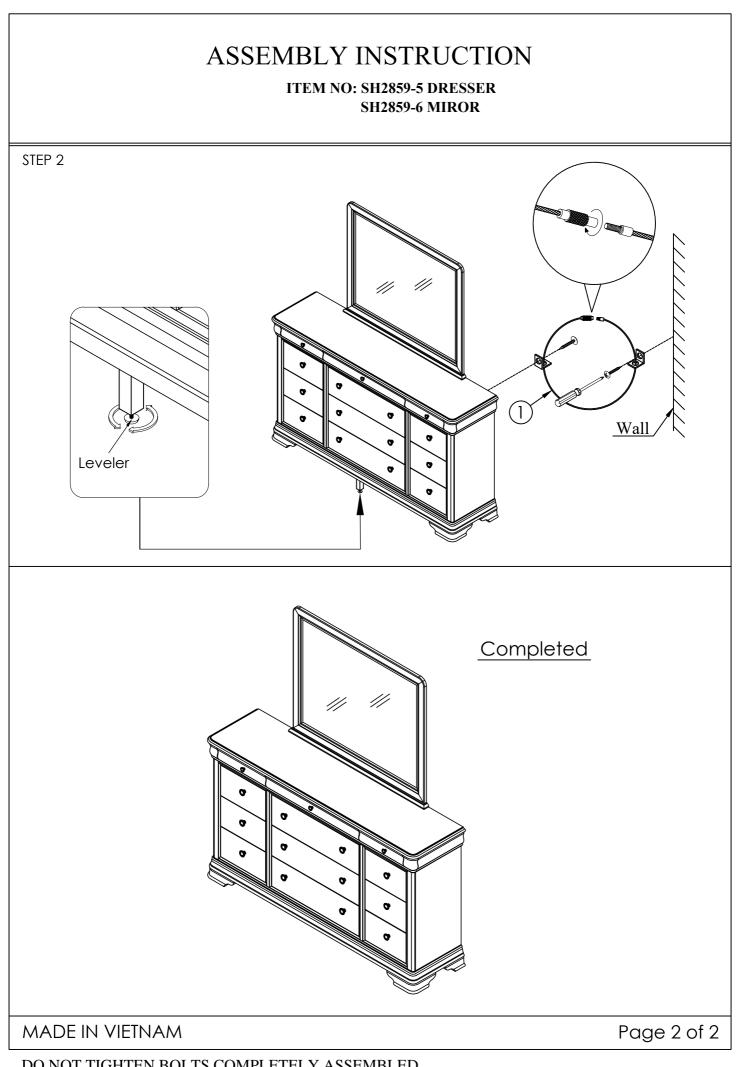

DO NOT TIGHTEN BOLTS COMPLETELY ASSEMBLED.