

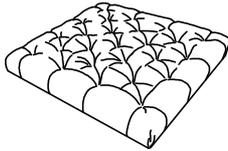
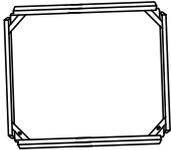

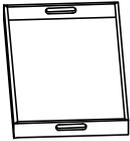

Assembly Instruction

SQUARE OTTOMAN WITH TRAY


SH3551GRY / SH3551BRN / SH3551DRG

NOTE: Do not use power tools for assembly . Power tools increase the risk of over tightening which leads to splitting or cracking the wood .

PARTS LIST

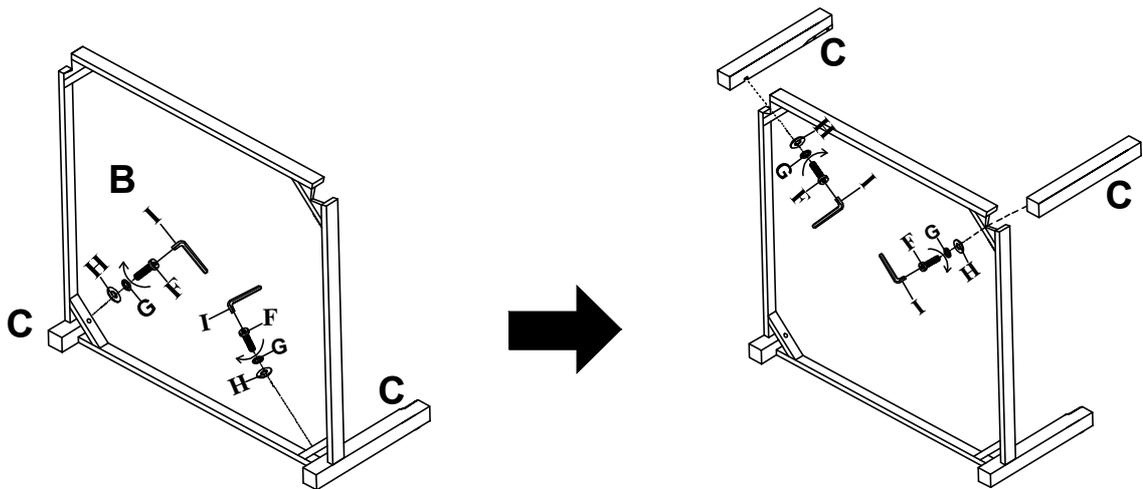
NO.	SKETCH	Q'TY	DESCRIPTION
A		1 PC	Seat
B		1 PC	Bottom frame
C		4 PCS	Leg
D		1 PC	Tray
E		1 PC	Non-woven fabric

HARDWARE LIST

NO.	SKETCH	Q'TY	DESCRIPTION
F		12PCS	Ø 5/16"*52mm BOLT
G		12PCS	Ø 5/16"*12*1mm SPRING WASHER
H		12PCS	Ø 5/16"*19*1mm FLAT WASHER
I		1PC	M4*59mm "L" ALLEN KEY

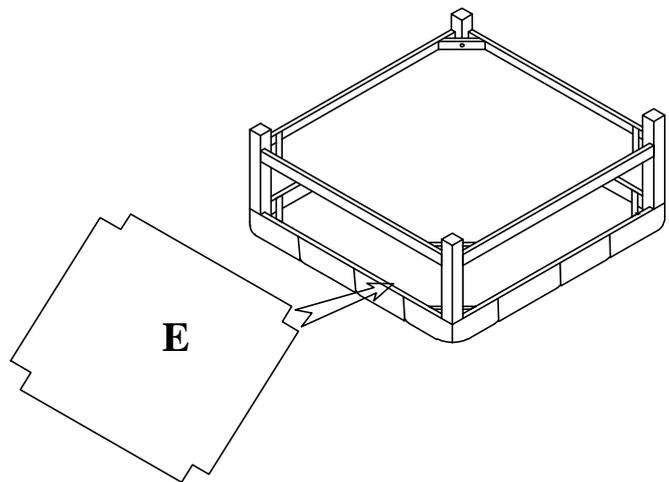
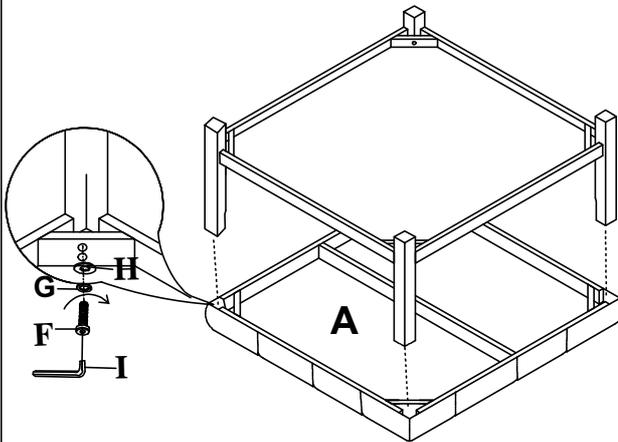
STEP # 1

Please take legs out the box then assemble legs to bottom frame.

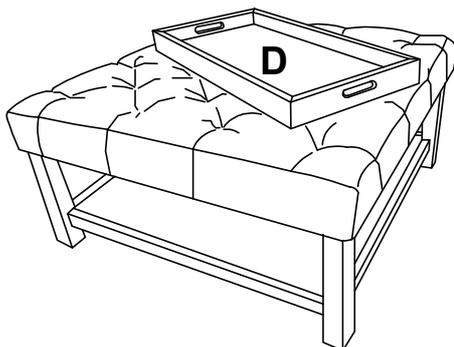


STEP#2

STEP#3



STEP#4



CARE INSTRUCTION FOR 100% POLYESTER FURNITURE :

In order to maintain the original appearance of your 100% polyester furniture, please follow below simple care procedure:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Exposure to sunlight or heating and air conditioning outlets will fade/damage 100% polyester.
- Wipe gently with a damp soft cloth to remove dust, dirt and any grime build up.



For items use on wooden floor, hard surfaces or carpets, it is recommended to Install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.