





ASSEMBLY INSTRUCTION

ITEM NO: SH1182-24 COUNTER HEIGHT CHAIR


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

PARTS LIST				HARDWARE LIST				
NO.	Description	Sketch	Q'ty	NO.	Description	Sketch	Size	Q'ty
A	CHAIR BACK		2 PCS	1	SHORT BOLT		5/16"-20 x 1 1/2"	4 PCS
B	CUSHION SEAT		2 PCS	2	MEDIUM BOLT		5/16"-20 x 2"	8 PCS
C	LEFT FRONT LEG		2 PCS	3	LONG BOLT		5/16"-20 x 3"	8 PCS
D	RIGHT FRONT LEG		2 PCS	4	SPRING WASHER		5/16"ID x 3/8"OD x 1/16"TK	20 PCS
E	FRONT STRETCHER		2 PCS	5	FLAT WASHER		5/16"ID x 3/4"OD x 1/16"TK	20 PCS
F	LEFT SIDE STRETCHER		2 PCS	6	WOOD SCREW		# 8 x 1 3/4"	12 PCS
G	RIGHT SIDE STRETCHER		2 PCS	7	ALLEN KEY		1/6"	1 PC


STEP 1

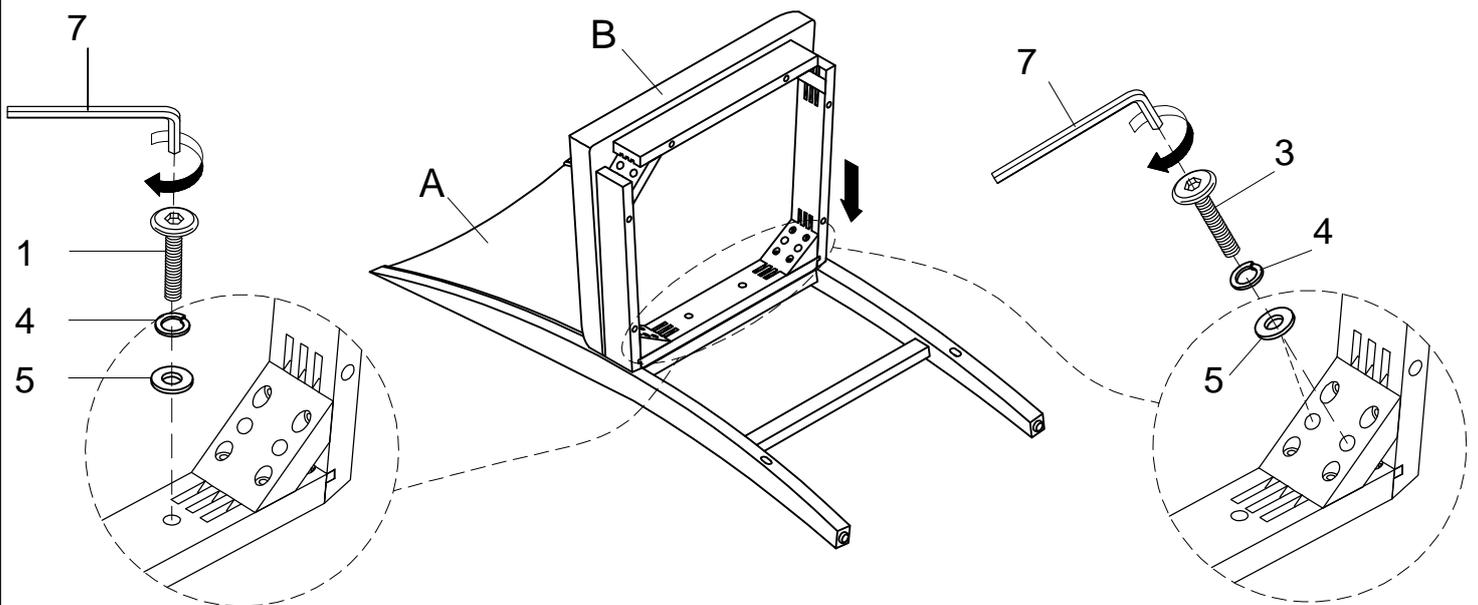


STEP 2

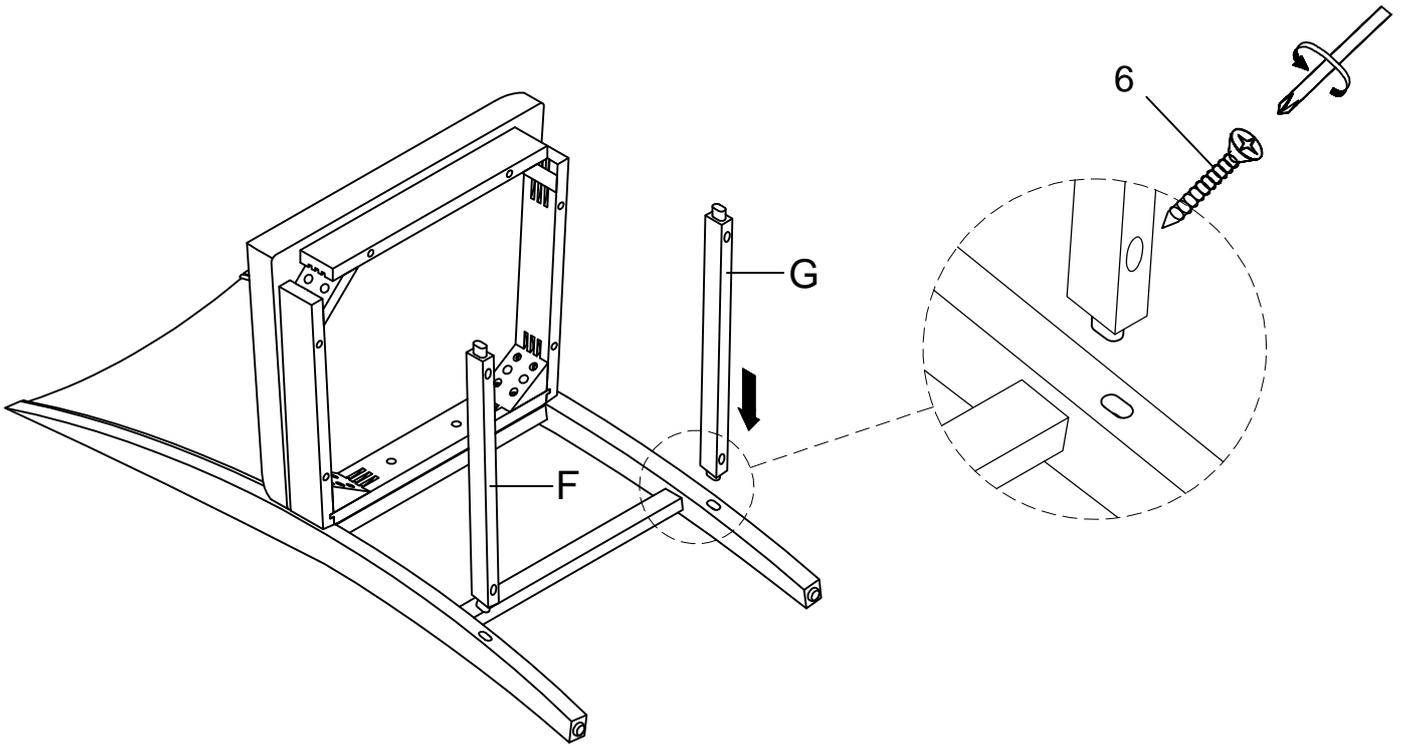

STEP 3

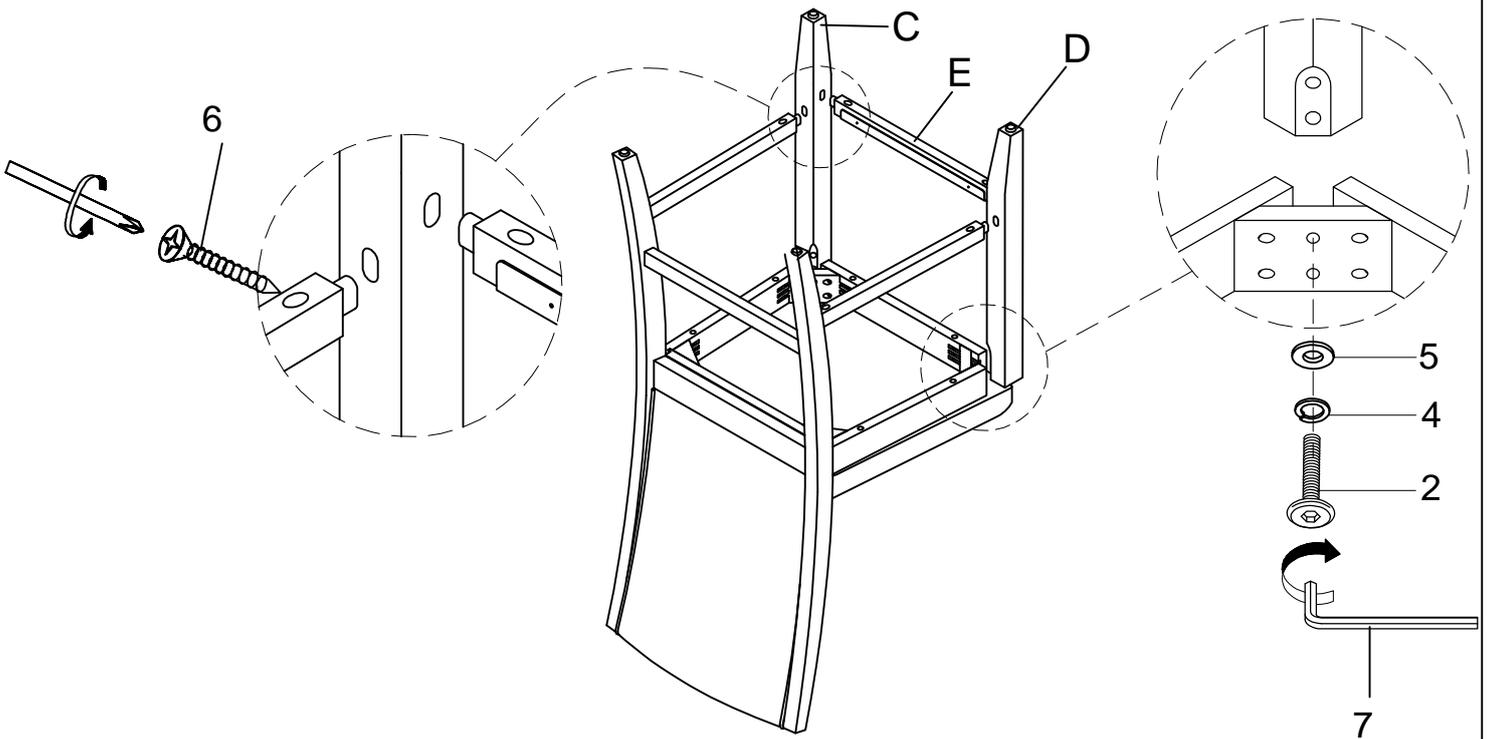

COMPLETED

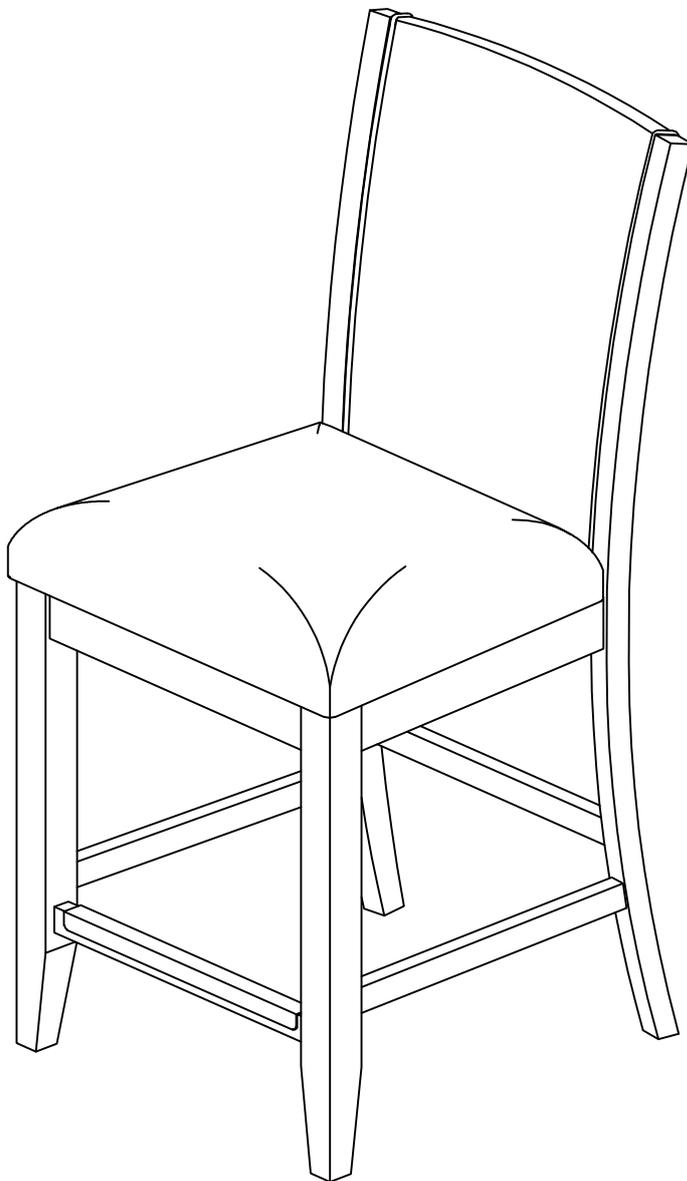

DO NOT TIGHTEN BOLTS UNTIL COMPLETELY ASSEMBLED.



It is recommended to install protective pads under all legs and supports to avoid damage or scratches when placing furniture on a wood floor or other hard surface, and to limit indentation and prevent discoloration if placing on carpet.