











Assembly Instructions

1951K-1/-2/-3CKDW CK BED
 1951K-1 KING HEADBOARD
 1951K-2 KING FOOTBOARD, SLATS, SUPPORT LEG & CENTER RAIL
 1951K-3CKDW CK STORAGE SIDE RAILS W/ DRAWER

 Thank you for purchasing this product. Please take time to read and follow the instructions below. Check that you have all parts and hardware before assembly.

 For items use on wooden floor, hard surfaces or carpets, it is recommended to install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.




PARTS LIST

No	DESCRIPTION		Q'TY
P1	Headboard		1 pc
P2	Footboard		1 pc
P3	Side Rails With Drawer		2 pc
P4	Slats		14pc
	Center Rail		2 pc
P6	Slat Support Legs		4 pc
P7	Drawer Support Legs		4 pc
P8	Top Crown		2 pc

HARDWARE LIST


No	DESCRIPTION		Q'TY
H1		Full Thread Bolt 5/16" -18 x 3"	4 pcs
H2		Curve Washer 5/16" x 1 5/32" x 9/16" x 9/32"	
H3		Hex. Nut 5/16" x 15/32" x 1/4"	4 pcs
H4		Allen Wrench 15/32"	1pc
H8		SCREW M4*50mm	10 pcs
H9		Wood Dowel p8 x 30mm	3pcs

ABOVE HARDWARE ARE PACKED IN 1951-3CKDW FOR ASSEMBLY


H5		ALLEN KEY M4	1 pc
H6		JCBC BOLT 1/4"-20 x2"	4 pcs
H7		SCREW M4*30mm	28 pcs

ABOVE HARDWARE ARE PACKED IN 1951 / 1951K-2 FOR ASSEMBLY

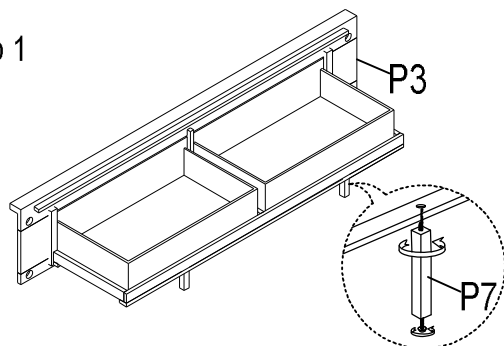
Step 1



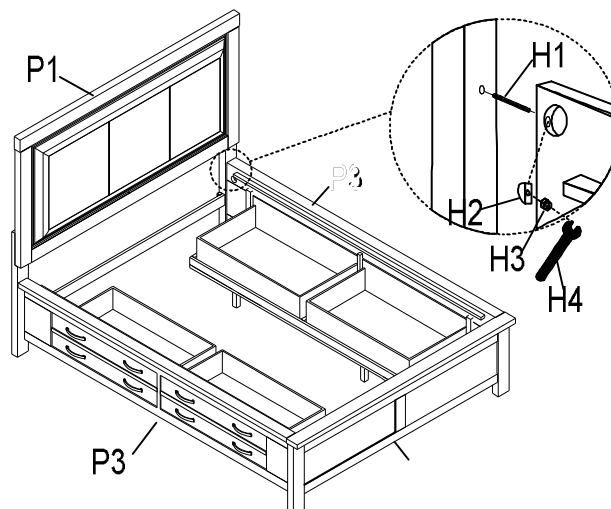
Step 2



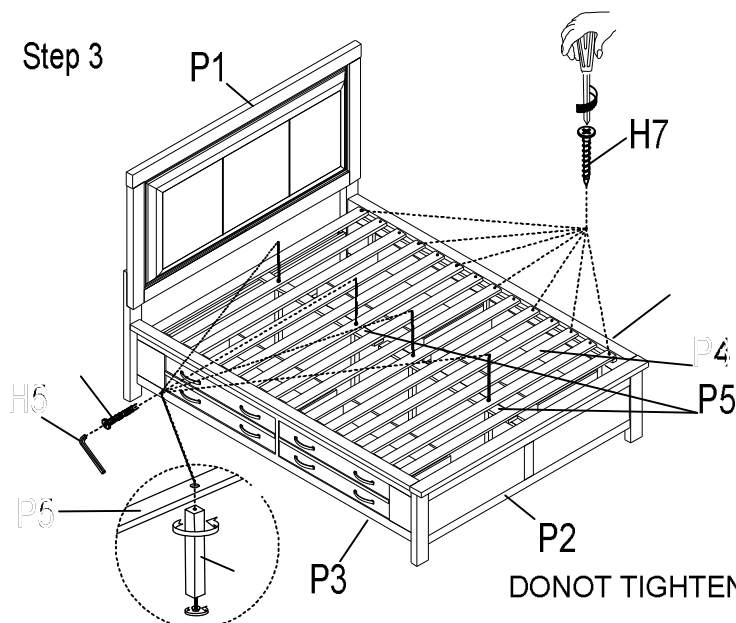Step 3



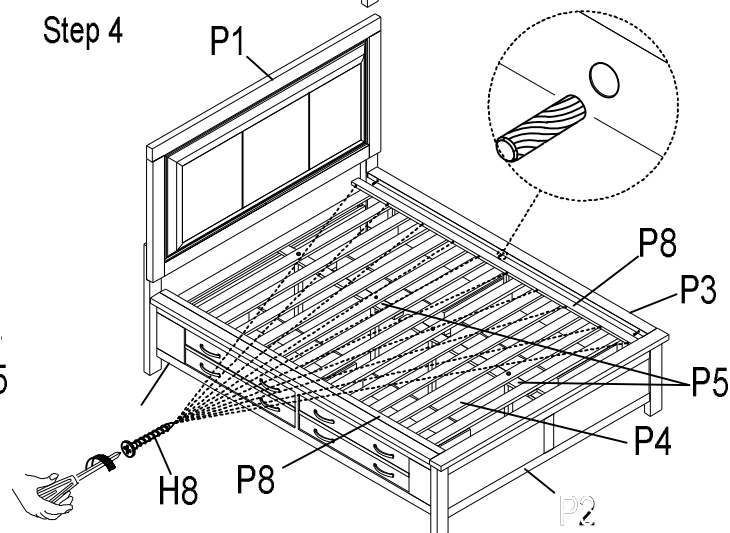Step 4



DONOT TIGHTEN BOLTS UNTIL COMPLETELY ASSEMBLED.