

# Assembly Instructions

1951-1/-2/-3DW QUEEN BED  
 1951-1 QUEEN HEADBOARD  
 1951-2 QUEEN FOOTBOARD, SLATS, SUPPORT LEG & CENTER RAIL  
 1951-3DW QN/EK STORAGE SIDE RAILS W/ DRAWER  
 1951K-1/-2/-3DW KING BED  
 1951K-1 KING HEADBOARD  
 1951K-2 KING FOOTBOARD, SLATS, SUPPORT LEG & CENTER RAIL










Thank you for purchasing this product. Please take time to read and follow the instructions below. Check that you have all parts and hardware before assembly.







For items use on wooden floor, hard surfaces or carpets, it is recommended to install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.




## PARTS LIST

No	DESCRIPTION		Q'TY
P1	Headboard		1 pc
P2	Footboard		1 pc
P3	Side Rails With Drawer		2 pc
P4	Slats		14pc
P5	Center Rail		2 pc
P6	Slat Support Legs		4 pc
P7	Drawer Support Legs		4 pc

## HARDWARE LIST


No	DESCRIPTION		Q'TY
H1		Full Thread Bolt 5/16" -18 x 3"	4 pcs
H2		Curve Washer 5/16" x 1 5/32" x 9/16" x 9/32"	4 pcs
H3		Hex. Nut 5/16" x 15/32" x 1/4"	4 pcs
H4		Allen Wrench 15/32"	1pc

ABOVE HARDWARE ARE PACKED IN 1951-3DW FOR ASSEMBLY


H5		ALLEN KEY M4	1 pc
H6		JCBC BOLT 1/4"-20 x2"	4 pcs
H7		SCREW M4*30mm	28 pcs

ABOVE HARDWARE ARE PACKED IN 1951 / 1951K-2 FOR ASSEMBLY

Step 1

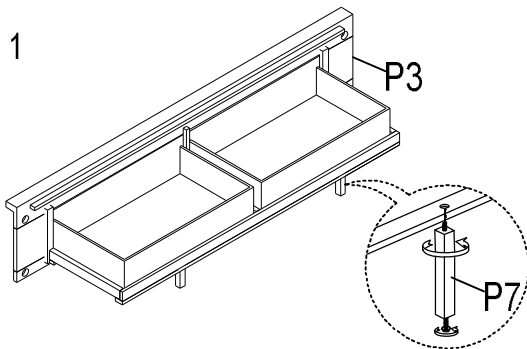

Step 3

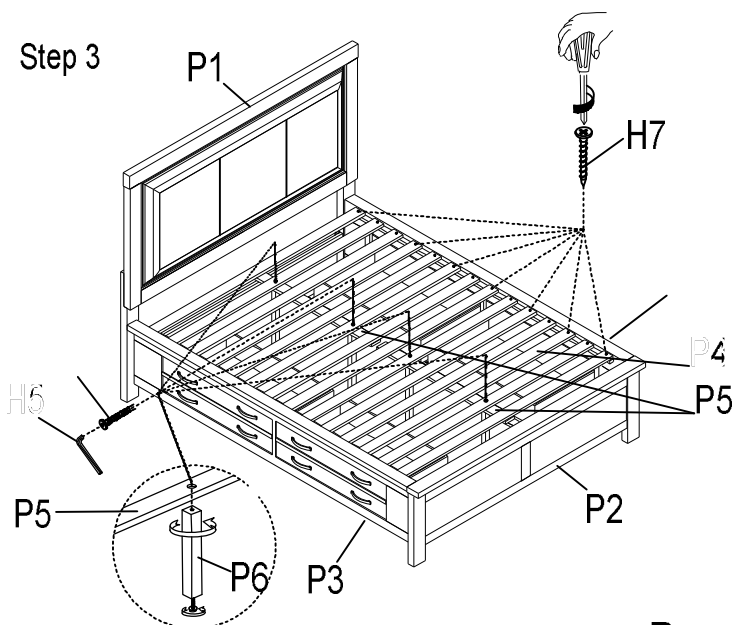

Step 2

