

Assembly Instructions

1951-1 QUEEN HEADBOARD

1951K-1 KING HEADBOARD



Thank you for purchasing this product. Please take time to read and follow the instructions below. Check that you have all parts and hardware before assembly.



For items use on wooden floor, hard surfaces or carpets, it is recommended to install protective pads under all legs and supports to

PARTS LIST


No	DESCRIPTION	Q'TY
P1	Headboard Frame	1 pc
P2	HB LEGS	2 pc
P3	Bottom Rail	1 pc

HARDWARE LIST



No	DESCRIPTION	Q'TY
H1	FLAT WASHER	8 pcs
	SPRING WASHER	8 pcs
H3	JCBC BOLT	8 pcs
H4	ALLEN KEY	1 pc

Hardware set are packed in 1951 / K-1 For Assembly.

Step 1

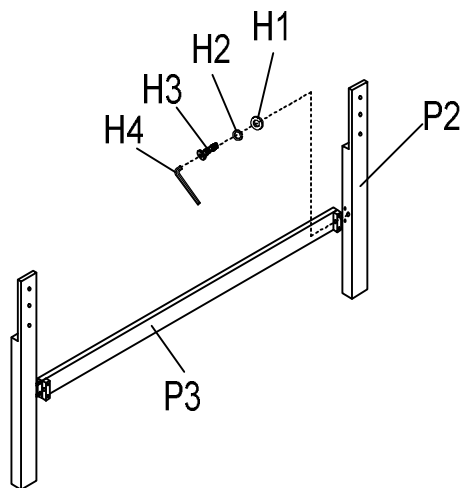

Step 2

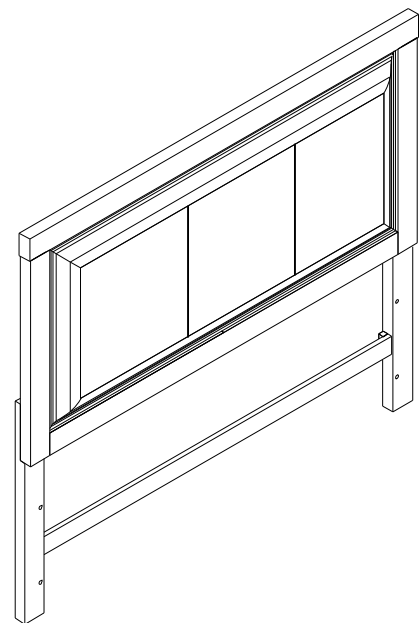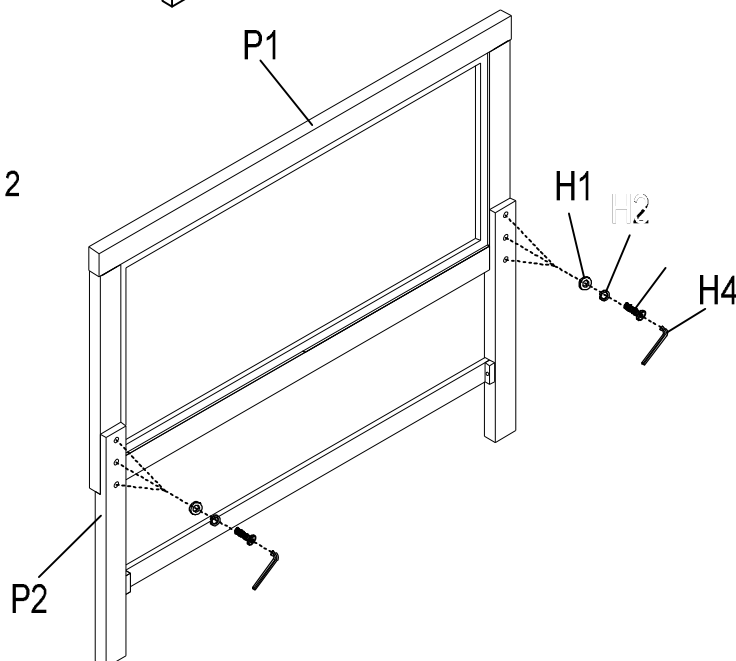

DONOT TIGHTEN BOLTS UNTIL COMPLETELY ASSEMBLED.

Made In Vietnam